

User Guide

Pantum PT18C3A Series

(CM2800 Series)

Color laser multifunction printer

PANTUM

Preface

Welcome to the Pantum series products!

We heartily appreciate your using of Pantum series products!

To protect your vital interests, please carefully read the following statements.

For more information, please visit our official website (www.pantum.com).

Legal Notice

Trademark

Pantum and Pantum logos are registered trademarks of Zhuhai Pantum Electronics Co., Ltd.

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks registered by Microsoft Corporation in the United States or other countries/regions.

Apple, AirPrint, Mac, and macOS are trademarks of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

The Mopria™ wordmark and the Mopria™ Logo are registered and/or unregistered trademarks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

Wi-Fi Direct, Wi-Fi Protected Setup (WPS), WPA, WPA2, WPA3 and Wi-Fi Protected Access are marks of the Wi-Fi Alliance®.

The Bluetooth® wordmark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Zhuhai Pantum Electronics Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

The ownership to the names of the software in this User Guide belongs to their respective owned companies in accordance with corresponding license agreement, and they are referred for instructions only.

All other product and brand names herein may be the registered trademarks, trademarks or service marks of their respective owners, and they are referred for instructions only.

Copyright

The copyright of this User Guide is owned by Zhuhai Pantum Electronics Co., Ltd.

It is prohibited to copy, translate, modify and transmit this User Guide by any means or forms without the prior written consent of Zhuhai Pantum Electronics Co., Ltd.

Version: V1.4

Disclaimer

For a better user experience, Zhuhai Pantum Electronics Co., Ltd. reserves the right to make changes to the User Guide. The information contained herein is subject to change without notice. Users are responsible for any damages arising from failing to follow this User Guide. Meanwhile, except the express warranty made in the product maintenance manual or service commitment, Zhuhai Pantum Electronics Co., Ltd. does not make any express or implied warranty or guarantee to this User Guide (including composing or words).

Using this product to copy, print, scan certain documents or images or make other forms of operations may be prohibited by the local laws. If you are uncertain about the legality of using this product for certain documents or images, you should consult your legal advisor in advance.

Safety Precautions

Disconnect the power supply

The product should be placed close to or easily accessible to power sockets, so as to allow easy disconnection of power supply!

Laser Safety

The laser radiation is harmful to the human body. Since laser components are completely sealed in the printer, laser radiation will not leak. To avoid laser radiation, please do not randomly disassemble the printer!

 

Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The printer has a Class 3B laser diode, which has no laser radiation leakage among laser components. The laser components shall comply with the requirements of: U.S. Code of Federal Regulations, 21 CFR 1040, IEC 60825-1.



Safety Warning

Please note the following safety warnings before using the printer:

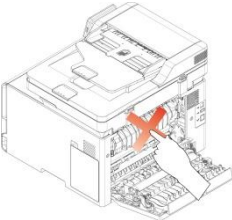 Warning	
 There is a high-voltage electrode inside the printer. Before cleaning the printer, make sure the power is turned off!	
 Plugging and unplugging the power cord plug with a wet hand may result in an electric shock.	
 The fuser unit is hot during and after printing. Touching the fuser unit (the shaded area as shown) may cause burns!	
 The fuser unit bears a high temperature warning label. Please do not remove or damage this label.	

Safety Information

Conventions

CAUTION: A caution indicates a potentially hazardous situation that could injure you.

Note: A note indicates the information that could help you or something that could damage the product hardware or software.

Different types of caution statements include:



CAUTION - POTENTIAL INJURY: Indicates a risk of injury.



CAUTION - SHOCK HAZARD: Indicates a risk of electrical shock.



CAUTION - HOT SURFACE: Indicates a risk of burn if touched.



CAUTION - TIPPING HAZARD: Indicates a crush hazard.



CAUTION - PINCH HAZARD: Indicates a risk of being caught between moving parts.



CAUTION - ROTATING FAN BLADES: Indicates a risk of being lacerated by moving fan blades.

Disclaimer



CAUTION - POTENTIAL INJURY: To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION - POTENTIAL INJURY: To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION - POTENTIAL INJURY: Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.



CAUTION - POTENTIAL INJURY: Do not use this product with an inline surge protector. The use of a surge protection device may result in a risk of fire, property damage, or poor printer performance.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections during a lightning storm.



CAUTION - POTENTIAL INJURY: Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, it could result in a risk of fire or electrical shock. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, make sure that all external connections (such as Ethernet) are properly installed in their marked plug-in ports.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices after setting up the printer, turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, turn them off as well, and unplug any cables going into the printer.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



CAUTION - POTENTIAL INJURY: If the printer weighs more than 18 kg, then it requires two or more trained personnel to lift it safely.



CAUTION - POTENTIAL INJURY: When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all covers and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has casters on its base, then carefully move it to the new location. Use caution when passing over thresholds and breaks in flooring.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Keep the printer upright.
- Avoid violent vibrations when moving.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.



CAUTION - HOT SURFACE: The inside of the printer might be hot. To reduce the risk of injury by a hot component, allow the surface to cool before touching it.



CAUTION - HOT SURFACE: Some parts of the printer are still in high temperature within a short time after use. To prevent burns, please don't directly touch places labeled with high temperature warning in contact with internal components after opening the printer's front or rear cover.



CAUTION - PINCH HAZARD: To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, covers, trays, and covers.



CAUTION - ROTATING FAN BLADES: To avoid the risk of laceration from moving fan blades, turn off the printer and unplug the power cord from the electrical outlet before accessing areas marked with this symbol.



CAUTION - POTENTIAL INJURY: This product uses lasers. Use of controls or adjustments or performance of procedures other than those specified in the User's Guide may result in hazardous radiation exposure.

This product is designed, tested, and approved to meet strict global safety standards with the use of specific manufacturer's components. The safety features of some parts may not always be obvious. The manufacturer is not responsible for any adverse consequences caused by using parts of other manufacturers. For services or repairs other than those described in the user document, please contact the Customer Service Center.

This product uses a printing process that heats the print media, and the heat may cause the media to release emissions. Please read and understand the section in your operating instructions that discusses the guidelines for selecting print media properly to avoid the possibility of harmful emissions.

This product may produce a small amount of ozone during normal operation, and may be equipped with a filter designed to limit ozone concentrations to levels well below the recommended exposure limits. To avoid high ozone concentration levels during extensive usage, install this product in a well-ventilated area and replace the ozone and exhaust filters if instructed to do so in the product maintenance instructions. If there are no references to filters in the product maintenance instructions, then it is not required to replace the filter for this product.

Please keep these safety instructions.

Precautions

Precautions before Using the Printer:

1. Read and understand all instructions;
2. Familiarize yourself with the basic principles associated with operating electrical appliances;
3. Comply with all warnings and instructions marked on the equipment or specified in the manual supplied with the equipment;
4. If the operating instructions conflict with the safety information, please refer back to the safety information, as you may have misunderstood the operating instructions. If you cannot resolve the conflicts, please call the Customer Service Hotline or contact a service representative for help;
5. Before cleaning the equipment, remove the power cord from the AC power supply outlet. Do not use liquid or aerosol cleaners;
6. Please make sure that the equipment is put on a stable desktop surface to avoid serious damage caused by the falling of the equipment;
7. Do not put the equipment near a radiator, an air conditioner, or a ventilation pipe;
8. Do not place any articles on top of the power cord. Do not put the equipment in a place where its power cord will be stepped on by people;
9. Outlets and extension cords must not be overloaded. This may reduce performance and could result in fire or electric shock;
10. Do not allow pets to chew on the AC power cord or the computer interface cable;
11. Do not allow sharp objects piercing equipment slot, so as to avoid contact with the high-voltage device, which otherwise may result in fire or electric shock. Take care not to spill liquids onto the equipment;
12. Do not disassemble the equipment so as to avoid the risk of electric shock. Necessary repairs may only be carried out by professional maintenance personnel.
Opening or removing the cover could result in an electric shock or other potential hazards.
Incorrect disassembly and assembly could also result in an electric shock during future use;
13. If any one of the following occurs, disconnect the equipment from the computer and pull out the power cord from the AC wall socket and contact a qualified member of the service personnel for maintenance:
 - Liquid has been spilled into the equipment.
 - The equipment has been exposed to rain or water.
 - The equipment falls, or the cover is damaged.
 - Significant changes in the equipment's performance.
14. Only adjust the control mentioned in the instructions. Incorrect adjustment of other controls may result in damage and mean that professional maintenance personnel need to spend more time fixing it;
15. Do not use the equipment in a thunderstorm so as to avoid the risk of an electric shock. If possible, pull out the AC power cord during a thunderstorm;
16. If you continuously print multiple pages, the surface of the tray will become very hot. Take care not to touch this surface, and keep children away from this surface;
17. The signal wire of the device connected with the printer can not be connected to the outdoors;
18. Please ensure timely ventilation in case of a prolonged use or printing huge amounts of documents in a poorly ventilated room;

19. In standby status, the product will automatically enter into the power saving (sleep) mode if it does not receive any job order for a while (such as 1 minute); and it can realize zero power consumption only if it has not been connected with any external input power supply;
20. As the Class 1 equipment, the product must be connected to the power supply outlet with protective grounding line when using;
21. This product should be placed according to the shipping marks on the product package box during delivery;
22. This product is a kind of low-voltage equipment. When using this product below the specified voltage range, please refer to the product precautions or call Pantum Aftersales Service Centre, if the toner comes off the printed contents, or the equipment starts slowly;
23. This product is sold as a complete machine. The consumers can go to Pantum Aftersales Service Centre to purchase parts they need. If the product sold is inconsistent with the package list, please go to the specified Aftersales Service Centre to solve the problem;
24. Install this product in a place with the temperature between 10°C to 32°C, and the relative humidity between 20% to 80%;
25. For security and other reasons the printer may switch to intermittent printing after a certain amount of continuous printing.
26. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
27. The power consumption of the product with wireless function is 8.00W / without wireless function is 2.00W in networked standby if all wired network ports are connected and all wireless network ports are activated.
28. RF Radiation Exposure Statement Caution: To maintain compliance with the RF exposure guidelines, place the product at least 20cm from nearby persons.
29. To avoid the danger of fire or electric shock, please only use the power cord provided with this product or authorized replacements approved by the manufacturer.
30. The power cord provided with this product is intended for this product only. Do not use it with other devices as it may cause fire, electric shock, or other injuries.
31. Do not use flammable sprays or combustible solvents near or inside the machine. Additionally, do not place them near or inside the machine as it may cause fire or electric shock.
32. Please keep this User Guide properly.

Identification Description

The following icons may appear on PANTUM products, please refer to the actual labeling placed on the product.

Where applicable, please take appropriate measures to use the product according to the labeling instructions.



This symbol indicates that, at the end of your product's life, it must not be discarded as domestic waste. Instead, you should dispose of your used equipment at a designated collection point for the recycling of waste electrical and electronic equipment. Ref: EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). Please contact your distributor / supplier for further information.



This product is suitable for indoor use only.

Normative Information And Statements

This section introduces the regulatory information and statements applicable to users in adpciflc regions.

Applicable to users in the Chinese region.

有害物质/元素及其含量表

产品中有害物质或元素的名称及含量

根据中国《电器电子产品有害物质限制使用管理办法》




部件名称	有害物质									
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE	DEHP	BBP	DBP	DIBP
塑胶部件	○	○	○	○	○	○	○	○	○	○
金属部件	×	○	○	○	○	○	○	○	○	○
电线电缆	×	○	○	○	○	○	○	○	○	○
电路板组件	×	○	○	○	○	○	○	○	○	○
玻璃部件	○	○	○	○	○	○	○	○	○	○
碳粉	○	○	○	○	○	○	○	○	○	○
包装材料	○	○	○	○	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制：

- 1. ○：表示该有毒有害物质在该部件所有均质材料中含量均在GB/T26572规定的限量要求以下。
- 2. ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。
- 3. 本产品的部分部件含有有害物质，这些部件是在现有科学技术水平下暂时无可替代物质。
- 4. 环保使用期限取决于产品正常工作的温度和湿度等条件。

珠海奔图电子产品回收利用体系

为保护环境，珠海奔图电子有限公司建立废弃产品的回收再利用体系，您可以选择将废弃的打印机和耗材交给当地奔图维修中心进行统一回收，再由国家认定的具备废弃物处理资质的处理机构对废弃产品进行正确的回收、再利用处理，以确保节约资源，降低环境污染，解除用户对废弃产品污染环境的担忧。

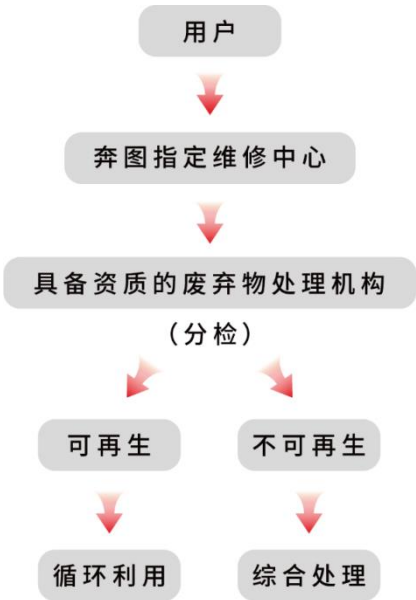

1. 用户负担费用：用户—维修中心；
2. 珠海奔图电子有限公司负担费用：奔图维修中心—具备资质的废弃物处理机构。

中国环境标识认证产品用户说明

噪声大于 63.0 dB(A)的办公设备不宜放置于办公室内，请在独立的隔离区域使用。

如需长时间使用本产品或打印大量文件，请确保在通风良好的房间内使用。

如您需要确认本产品处于零能耗状态，请按下电源关闭按钮，并将插头从电源插座断开。

在产品停产后，保证至少 5 年内可提供产品在正常使用范围内可能损坏的备件和产品的消耗材料。

[illegible]

本机属于 1 类激光产品。

中国无线电发射设备通告

此系列产品中部分产品带有无线功能，带无线功能产品的型号核准信息显示在产品本体的铭牌上。

对于 5150-5350 MHz 频带:

本设备在频带 5150-5350MHz 下工作时仅供室内使用。

Applicable to users in the European region

EU Regulatory Statement



This symbol indicates that, at the end of your product's life, it must not be discarded as domestic waste. Instead, you should dispose of your used equipment at a designated collection point for the recycling of waste electrical and electronic equipment. Ref: EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). Please contact your distributor / supplier for further information.



European Community (EC) directives conformity

The product complies with the requirements of the Low Voltage Directive 2014/35/EU, the EMC Directive 2014/30/EU, the Ecodesign Directive 2009/125/EC, the RoHS Directive 2011/65/EU.

Radio Equipment directive 2014/53/EU only for product with wireless feature.

The manufacturer of this product is: Zhuhai Pantum Electronics Co., Ltd., Building 02,06 and 08, No.888 Shengping Avenue, Pingsha Town, Zhuhai City, Guangdong Province, 519000 PR China.

A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative.

The product satisfies the Class B limits of EN 55032 / EN 55035.

RF exposure statements (only for product with wireless feature)

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

For customers in EU/ EFTA/ UK and Turkey (only for product with wireless feature)

This device is restricted to indoor use when operating in the 5150-5350MHz frequency range to reduce the potential for harmful interference to co-channel mobile satellite systems in all EU/EFTA member states, Turkey and the UK.

	AT	BE	BG	CH	CY	CZ	DK	DE	EE	EL	ES	FI
	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV	MT	NL
	NO	PL	PT	RO	SE	SI	SK	TR	UK(NI)			
	UK											

Laser notice

The printer is a class 1 consumer laser product that is compliant with EN 50689:2021.

Applicable to users in the Eurasian Economic Union

Сертифицирован Таможенным Союзом России, Белоруссии и Казахстана.
Унифицированный символ: EAC.

Applicable to users in Brazil

Incorpora produto homologado pela Anatel sob número 24205-23-08708

Table of Contents

01 Before Using the Printer	1
Product View.....	1
Control Panel	3
Home screen.....	4
Touch screen button.....	5
Function of power indicator	5
02 Paper and Print Media	6
Selecting paper.....	6
Loading Paper.....	7
Load in the standard feed tray.....	7
Install the multipurpose feed tray.....	8
Paper and Manuscript Use Process.....	9
Scanning With Tablet.....	10
Scan with the automatic document feeder (ADF)	12
03 Driver installation and uninstallation	13
Driver Setup.....	13
One-click Installation (For Windows and macOS)	13
Uninstall Driver.....	14
Method to uninstall driver under Windows	14
Method to uninstall driver under macOS	14
04 Wired network setup (applicable to wired network models)	15
Set IP Address	15
Automatic Setting	15
Manual Setting	15
05 Wireless network setup (applicable to Wi-Fi models).....	16
Basic structure mode.....	16
Wireless network setup tools.....	16
How to disable the Wi-Fi network connected	17
06 Web server.....	18
Visit the embedded Web server.....	18
07 Print.....	19
Print Function.....	19
Print Settings	20
Setting the printing parameters	20
Duplex	21


Print without margins	22
Red Header File Printing	23
08 Copying	24
Copying function	24
Common copying setting	24
Multipage	25
Collated copy	26
Duplex copy	26
ID copy settings	28
Receipt setting	28
09 Scan	29
Pull Scan	29
Windows system scan	29
macOS System Scan	30
Push Scan	30
Scan to PC	31
Scan to E-mail	31
Scan to FTP	31
Scan to SMB	32
Scan USB drive	33
10 Routine Maintenance	34
Cleaning the Printer	34
Cleaning the printer	34
ADF cleaning	36
Replacing parts and consumables	38
Replacing the toner cartridge	39
Replacing the waste toner bottle	43
Replace the tray	44
Move the printer	45
Move the printer to another location	45
Transporting the printer	45
11 Troubleshooting	46
Avoiding jams	46
Correct loading of paper	46
Use recommended paper	47
Locate jammed paper	48
Cleaning Jammed Paper	49

The paper is jammed in the standard feed tray.....	49
The paper is jammed in the manual feed tray	51
The paper is jammed in the multi-purpose feed tray	53
Paper jam in the rear cover	54
Paper jam in the automatic document feeder (ADF)	57
Software Failure.....	59
Error Message.....	59
Common Troubleshooting	61
Common Problems.....	61
Image Defects	63
12 Product Specifications	68
Overview of the Specifications	68
Print Specifications	69
Copy Specifications.....	70
Scan Specifications.....	70

01 Before Using the Printer

Product View

Side view

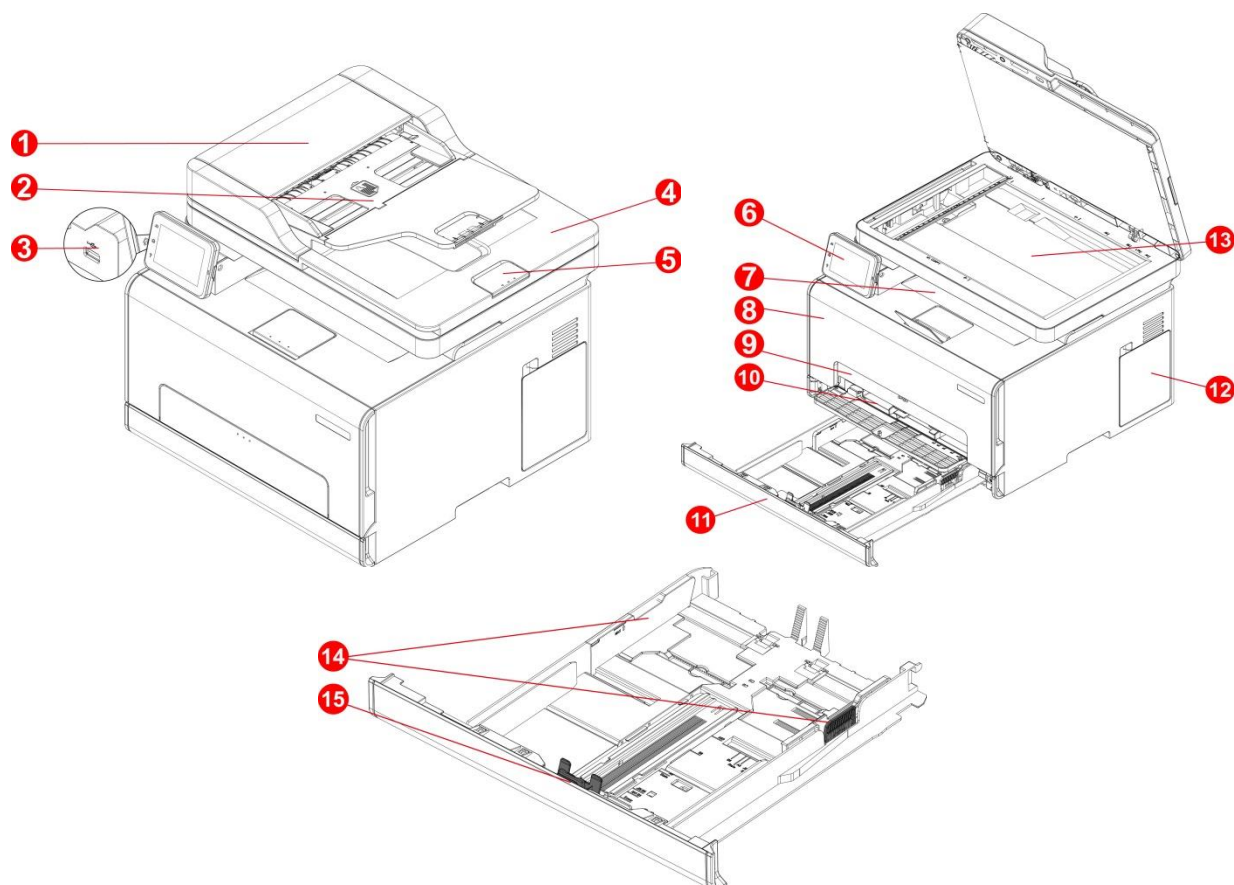


1	Cover of automatic document feeder	This is used to remove the paper jammed in scanning for the ADF.
2	Feed tray of automatic document feeder	This is used to place originals scanned from the ADF.
3	Front USB interface	Scan into the USB flash disk
4	Cover of scanner	Open the cover of scanner to place the scanned originals on its glass plate.
5	Exit tray of automatic document feeder	Prevent originals scanned from falling off.
6	Control Panel	Indicate printer status to conduct set operation.
7	Standard exit	For storing the printed paper.
8	Front Cover	To open the front cover to take out the laser toner cartridge.
9	Width guide plate of multi-purpose feed tray	Slide paper deflector to adapt to paper width.
10	Multipurpose feed tray	For placing media to be printed in multi-purpose tray.

11	Standard feed tray	For placing the media for printing from the standard feed tray.
12	Waste toner bottle	Store the waste toner produced in printing.
13	Glass Platen	To put the original of tablet PC for scan.
14	Width guide plate of standard feed tray	Slide paper deflector to adapt to paper width.
15	Length guide plate of standard feed tray	Slide paper length deflector to adapt to paper length.

Note: • Printer appearance may vary depending on the printer model and configuration; the schematic diagram is for reference only.

Rear View

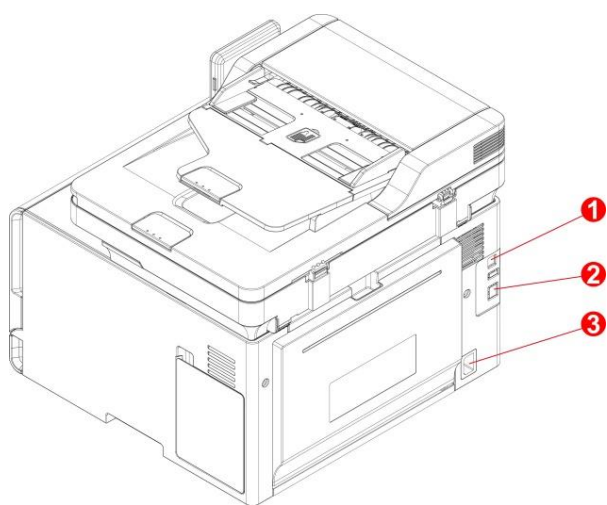


1	USB Interface	For connecting product to computer with USB cable.
2	Network Interface(applicable to models supporting network function)	For connecting product to network with network cable.
3	Power Interface	For connecting product to power with power cord.

Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.

• To avoid loss of data or printer malfunction, do not touch the USB cable, any wireless network adapter, or the printer in the areas shown in the printing process.

Control Panel


Overview of control panel

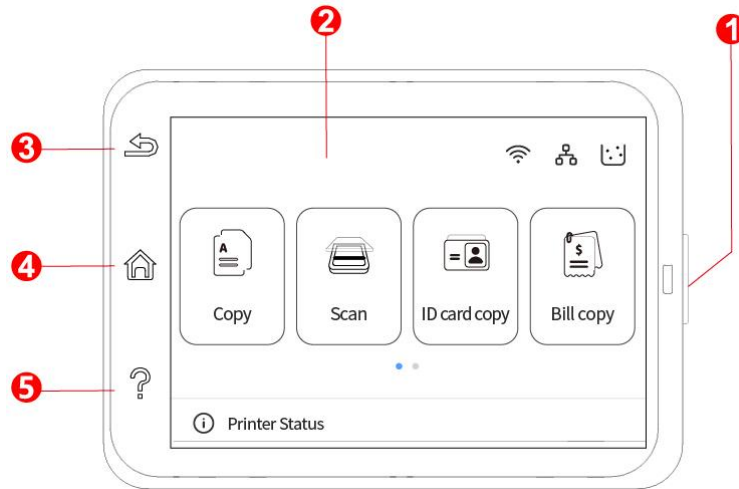

No.	Name	Functions
1	Power switch	Turn the power on or off and press this button under Ready state to enter energy-saving mode. Press and hold this button for more than 2s to turn the printer power off.
2	Color touch screen	• Check printer status and message. • Set and operate printer.
3	Return button	Return to the previous menu.
4	Home button	Go to the home screen.
5	Help button	• Access to Help system of control panel. • It describes how to use each screen and eliminate faults.

Home screen


The layout of the main screen is shown below:

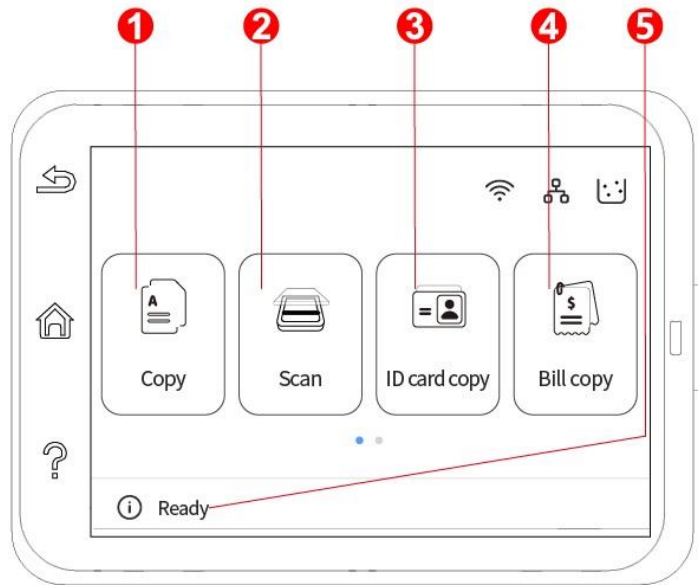

No.	Name	Functions
1	Copy	Access to “Copy” menu and make a copy.
2	Scan	Access to “Scan” menu and scan document.
3	ID copy	Access to “ID copy” menu and make an ID card copy.
4	Bill copy	Access to “Bill copy” menu and make a bill copy.
5	Status message bar	Display the current printer status.


Touch screen button

Layout of touch screen buttons of printer control panel is shown as below:

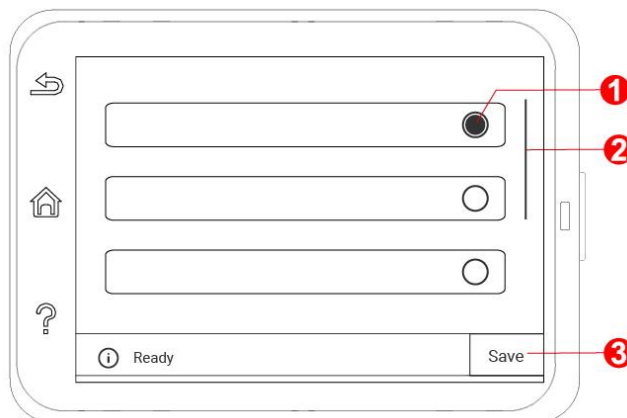

No.	Name	Functions
1	Radio button	Select or delete an item.
2	Slide the button	Scroll up and down.
3	“Save” button	Save setting.

 Function of power indicator

No.	Status displayed by power indicator	Status	Status Description
1		Die out	The printer is powered off.
2		Always on	Printer is not in sleep state (printer ready, printing, processing, etc).
3		Blink	The printer is in sleep state.

02 Paper and Print Media

Selecting paper

Standard feed tray	Media Type	Plain paper1(70~89g/m ²), Plain paper2(90~105g/m ²),thin paper(60~69g/m ²)
	Media size	A4,A5,A6,Legal,Letter,JIS-B5,ISO B5,Executive, Folio,Oficio ,Statement ,16K,32K,Big 16K,Big 32K,B6,Customize paper
	Media weight	60~105 g/m ²
	Maximum capacity of the tray	250 pages (80 g/m ²)
Multipurpose feed tray	Media Type	Plain paper1(70~89g/m ²), Plain paper2(90~105g/m ²),thin paper(60~69g/m ²),thick paper1(106~130g/m ²), thick paper2(131~176g/m ²), thick paper3 (177~200g/m ²) , Label paper (smooth surface), label paper (matte),carton paper,label paper, envelope
	Media size	A4,A5,A6,Legal,Letter,JIS-B5,ISO B5,Executive,Folio,Oficio,Statement,16K,32K,Big 16K,Big 32K,No.10 Env,Monarch Env,DL Env,C5 Env,C6 Env, ZL,Janpanese Postcard,Yougata4,Younaga3,Nagagata3,Postcard,B6,Customize paper
	Media weight	60~200 g/m ²
	Maximum capacity of the tray	1 pages


Note: • 80 g/m² standard paper is recommended for this printer.

- It is not recommended to use special paper extensively, which may affect the service life of the printer.
- The print media that does not meet the guidelines listed in this User Guide may result in poor print quality, increased paper jam and excessive wear of the printer.
- Properties such as weight, composition, texture and humidity are important factors affecting the printer performance and output quality.

Loading Paper


Load in the standard feed tray

1. Remove the standard feed tray from the printer completely.

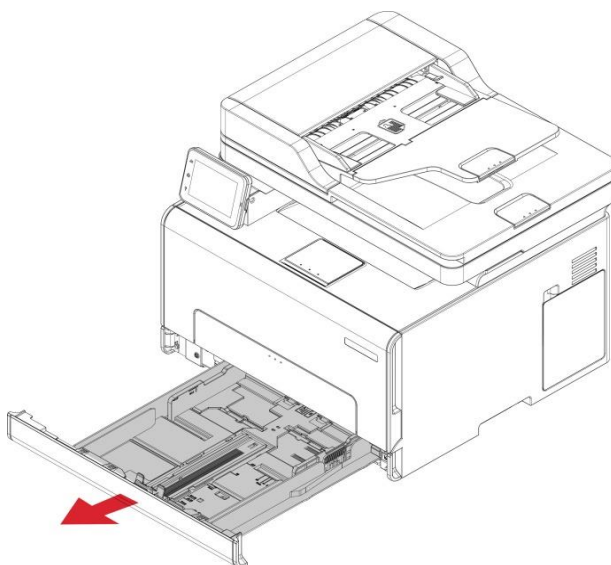

Note: • To avoid paper jams, do not remove the tray while the printer is busy.


2. Load the paper with the printable side facing up.

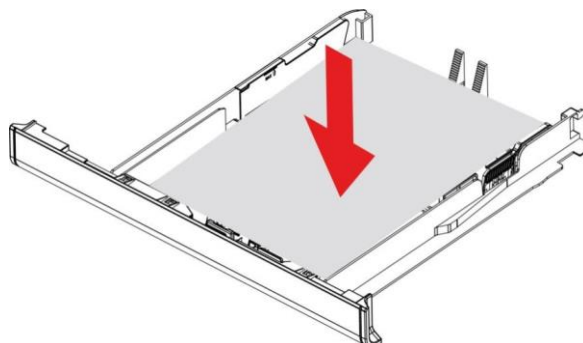


Note: • For single-sided printing, load the paper with the printing side facing up and the header facing the inside of the tray.

- Do not slide paper into the tray.

- To avoid paper jams, make sure that the stack height is below the maximum paper fill indicator.

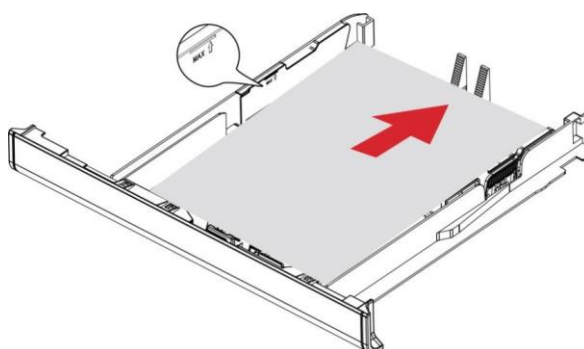


3. Adjust the guide to match the size of the loaded paper.

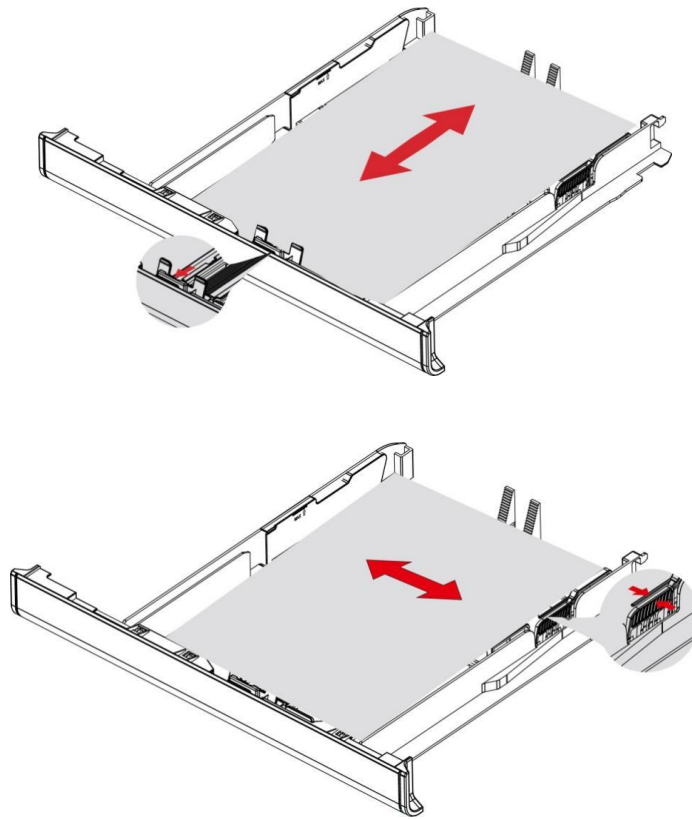

4. Insert the tray.


Install the multipurpose feed tray

1. Adjust the guide to match the size of the loaded paper.

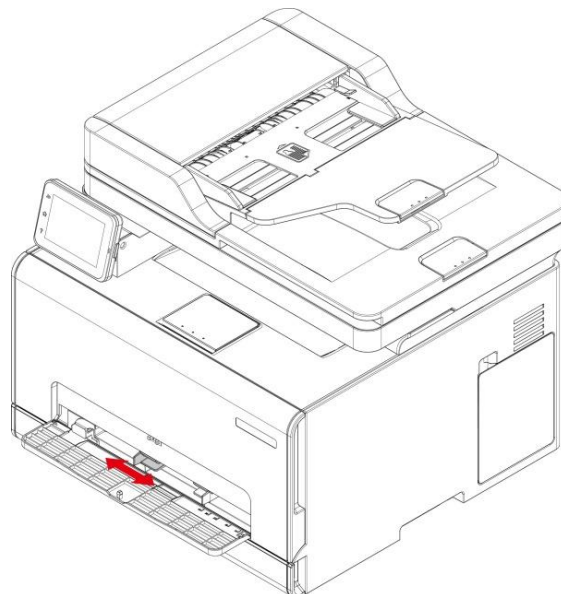

2. Load a sheet of paper with the printable side facing up.

Note: • For single-sided printing, load the paper with the printable side facing up and the top edge going into the printer first.
• For better printing effect, it is recommended to use new, undamaged paper.

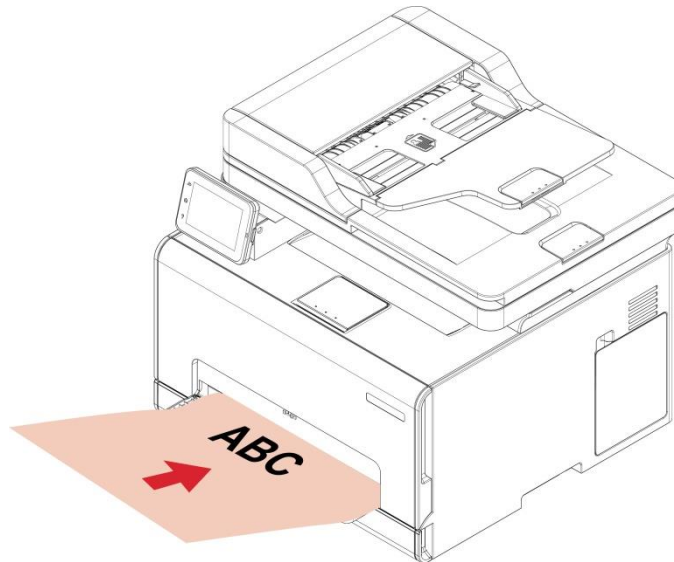

3. Feed the paper until its front edge is pulled in.

Note: • Do not force the paper into the multi-purpose feed tray to avoid paper jam.

Paper and Manuscript Use Process

Manuscript requirements:


Source	Type	Size
Automatic document feeder (ADF)	Plain paper	A4,A5,JIS B5,A6,Letter,Folio,Legal
Platen	—	A4, A5, A6, JIS B5, Letter, Full Platen, Custom

Scanning With Tablet


Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.

Operation steps:


1. Lift up the scanner cover.

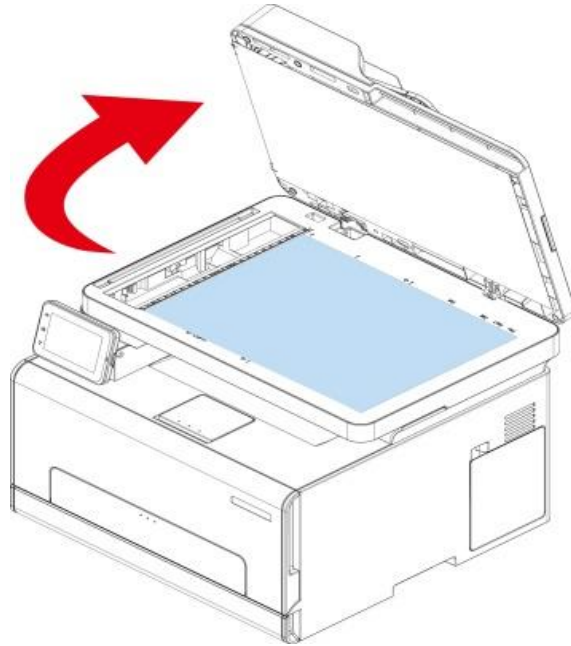

2. Load the manuscript face down.

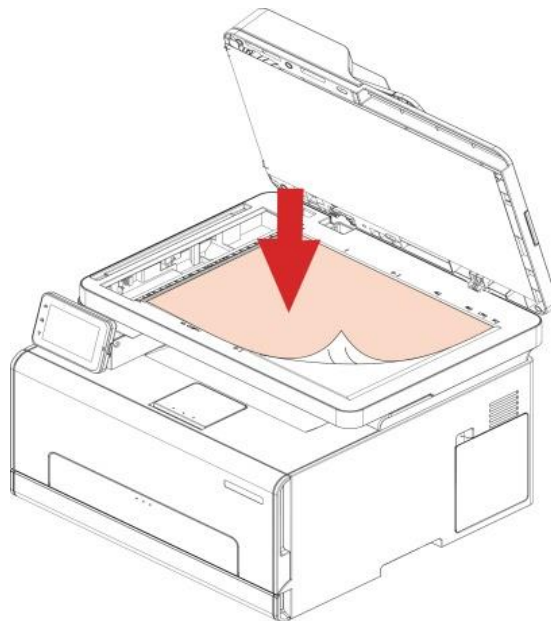


3. Align the manuscript to match the appropriate paper size.

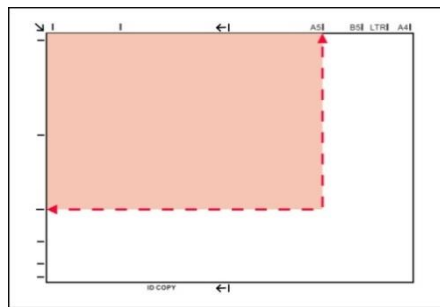

Note: • If the manuscript does not match with any size marker, please align the upper-left corner of the manuscript with the arrow.
• Make sure there is no document in the ADF. If a document is detected in the ADF, it will be more preferential than that on glass platen.


4. Close the scanner cover gently.

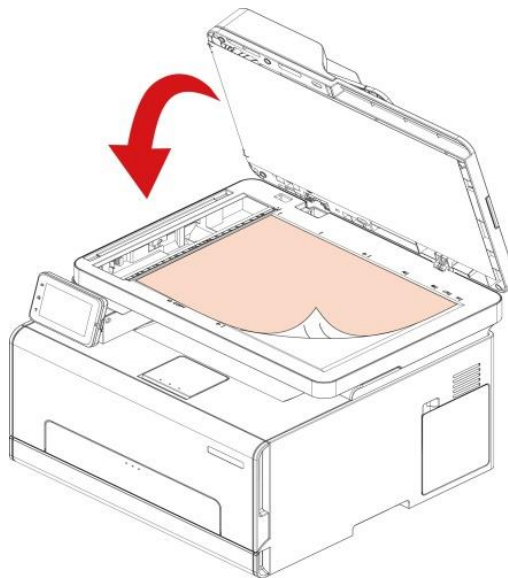


Note: • Please put the paper or document on the scanner glass after the glue, ink or correction fluid are completely dried.
• Rough textured, uneven, oil stained and extremely smooth paper will make printing effect poor.
• Please make sure that there is no dust, fluff, etc. on the paper.
• Paper shall be put on a flat surface and stored under a cool and dry environment.
• To avoid influencing the definition, please don't open the scanner cover during scanning with the platen.

Scan with the automatic document feeder (ADF)

1. Put the original into the ADF with its front upward and top fed first.

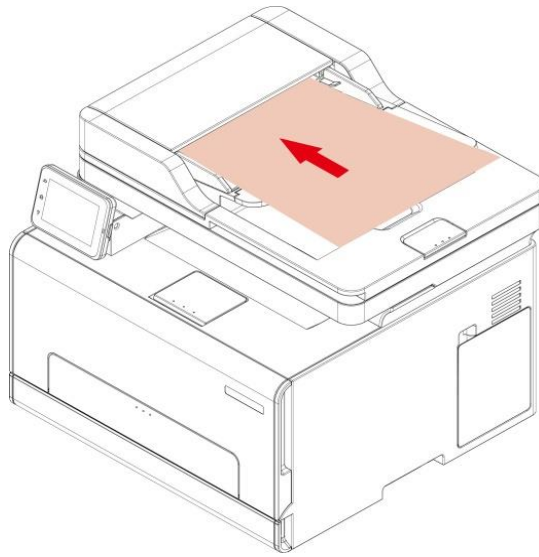

2. Adjust the document guide till it gets close to the paper stack.

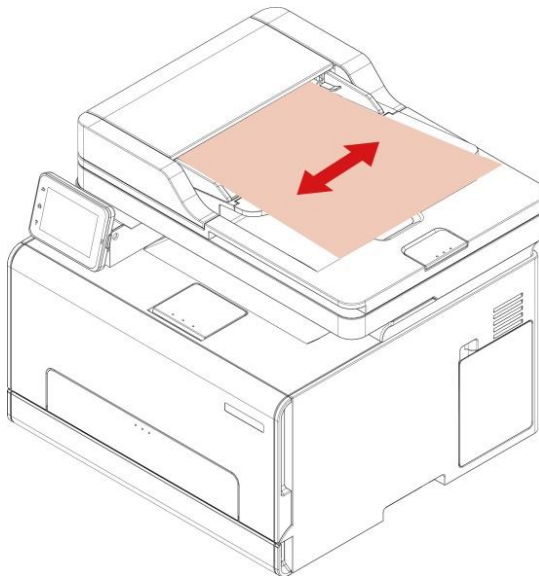

Note: • The ADF supports feeding 50 pieces of paper at most that should be fed one by one.

03 Driver installation and uninstallation

Driver Setup

This software provides a one-click installation method for driver installation on Windows and macOS systems, which can help you automatically complete the driver installation faster and more easily.

Note: • Driver installation interface may differ because of different models and functions, so the schematic diagram is only for your reference.

One-click Installation (For Windows and macOS)

One-click installation provides you with three installation methods: "Wi-Fi", "USB", and "Wired Network". This manual focuses on the "Printer Installation by USB Connection".


Connect printer via USB cable

1. Connect the printer to computer via USB cable, then power the printer on.
2. Insert the accompanying installation disk into the computer CD drive, or log in to Pantum official website (www.pantum.com) to download the drive.

Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

3. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
4. For Windows, follow Step 5. For macOS, enter PC password before proceeding to Step 5.

5. The setup will start when you click on "One-click installation" under USB. The setup may take a while, depending on your PC configuration. Please wait.

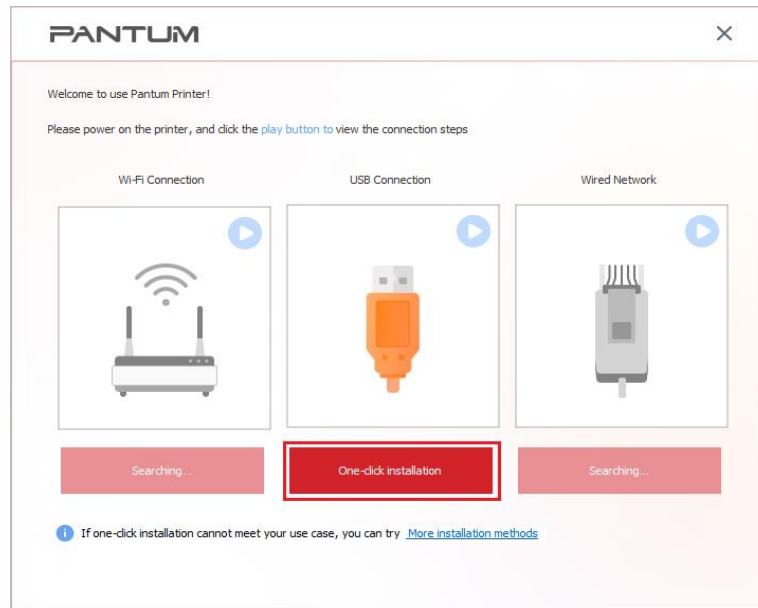

6. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly. (If you need to install the OCR software under the Windows system, please install it when the computer is connected to the Internet.)

Uninstall Driver

Method to uninstall driver under Windows

Windows 7 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.

1. Click the Start menu of computer and then click All programs.
2. Click Pantum, and then Click Pantum XXX Series.
Pantum XXX Series where XXX represents product model.
3. Click uninstall to delete the driver according to instructions on uninstall window.
4. Restart computer after finishing unloading.

Method to uninstall driver under macOS

macOS10.14 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.

1. Click "Go" - "Applications" - "Pantum" - "Utilities" - "Pantum Un-install Tool".
2. Delete the driver as instructed in the pop-up Uninstall window.
3. Uninstall complete.

04 Wired network setup (applicable to wired network models)

In case printers support wired network printing, they can be connected to network to control printer to print in wired network mode.

Set IP Address

The IP address of the printer may be automatically obtained through DHCP function or set manually.

Automatic Setting

DHCP automatic setting function is enabled by default on the printer.

1. Connect the printer to the network through a network cable and complete the startup preparation work.

2. The printer will receive the IP address assigned by server automatically. It may take server minutes to receive IP address under the influence of network environment.

You can check the IP address of printer by printing "Network setup page" out, or check network information by viewing the control panel of printer. If the IP address is not listed, please check network environment and then try again after waiting for several minutes.

Note: • If DHCP server fails to assign IP address automatically, the printer will get the link-local address assigned by printer automatically: 169.254.xxx.xxx.


Manual Setting

To set up IP address for printer through the control panel of printer manually.

To set up IP address for printer through the embedded Web server manually.


05 Wireless network setup (applicable to Wi-Fi models)

Based on the model, the printer model with Wi-Fi print function supports two types of wireless network connection: Wi-Fi Station and Wi-Fi Direct. Usually, only one connection is enabled between the computer and the printer at a time.

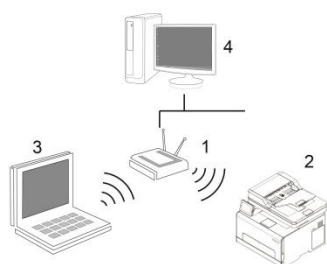

Wi-Fi Station: connecting to a wireless device via router

1. Access point (wireless router)
2. Wireless network printer
3. Computer connecting to access point via wireless network
4. Computer connecting to access point via network cable

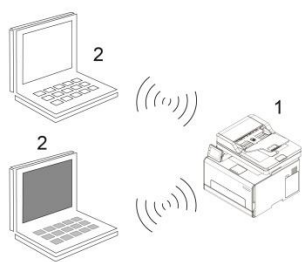

Wi-Fi Direct mode: wireless client is connecting to a printer with Wi-Fi function

1. Wireless network printer
2. Wireless client is directly connecting to a wireless network printer

Basic structure mode

You can connect a computer to your printer via access point (wireless router) as the medium. Access point (wireless router) connection is divided into wireless network setup and Wi-Fi Protected Setup (WPS).

Important: Before the installation of wireless network, you must learn about the network name (SSID) and password of your access point (wireless router), which are required for the wireless network configuration. If they cannot be confirmed, please consult your network administrator or the manufacturer of your access point (wireless router).

Wireless network setup tools

If your computer has been installed with a driver and had been connected to wireless network, but the wireless network was changed, you can set it again with wireless network setup tools.

Preliminary preparations

1. Access point (wireless router).
2. A computer that has been connected to network.
3. A printer that has wireless network function.

Setup methods of wireless network setup tools

Take the wireless network setup tool in computer.


- 1) Windows system: Click the "Start menu" – "All programs" - "Pantum"— Product name – "Wireless network setup tool".
- 2) macOS system: click "Go" - "Applications" - "Pantum" - "Utilities" - "Wireless Network Configuration Tool" on the computer Finder menu bar.

How to disable the Wi-Fi network connected

1. From printer control panel navigate to: "  " -Network set-Wireless conf.- Station.
2. Select "Close" button and save.

06 Web server

You can manage printer setup via the embedded Web server.

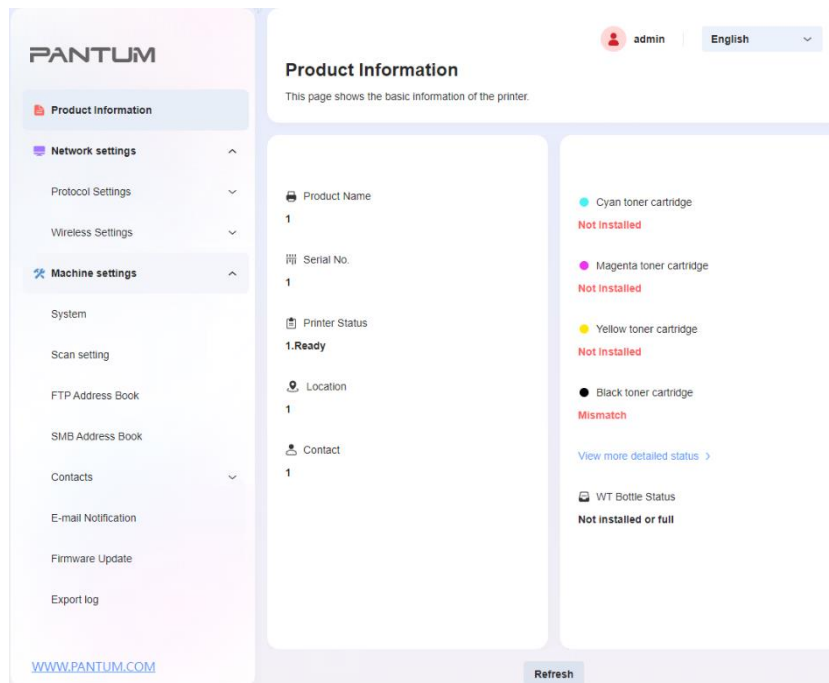

Visit the embedded Web server

1. Turn on the power of printer and computer.
2. Connect the printer to network to ensure that the printer is connected to the network where the computer is connected to.
3. Input the IP address of printer in the address bar of Web browser to visit the Web server imbedded in printer.
4. On the interface, enter a custom username and password.

Note: • Password must be at least 8 characters and include letters, numbers, and special characters.
• On first login or after a factory reset, you must enter the product serial number, custom username, and password.
• Print the "Printer Information Page" to view the product serial number.

5. Click "Login."

07 Print

Print Function

You can set the print function through "Start"->"Devices and Printers"- select corresponding printer - right click - set print function in "Printing preferences". Some functions are as follows:

Functions	Diagram
Color Printing	
Monocolor printing	
Collate Print	
Reverse Print	
N-in-1	
Poster Print(for Windows Operation System only)	
Zoom Print	

Booklet printing



Custom Size



Note: • You can enable printing preference and click the help button to view detailed function Description.

Print Settings

Setting the printing parameters

You can set up printing parameters with the following two methods before sending printing work.

Operating system	Temporary printing setup change	Permanent default setup change
Windows	1. Click "File" menu – "Print" – "Select printer" - "Printer properties" (the detailed steps may differ because of multiple operating systems).	1. Click "Start" menu- "Control Panel" – "Devices and Printers". 2. Right click on the printer icon, select "Printing preference" and then change setup and save it.
macOS	1. Click "File" menu – "Print". 2. Change setup in the window popping out.	1. Click "File" menu – "Print". 2. Change setup in the window popping out and click to save the preset. (Select preset every time before printing, or print according to default setup.)

Note: • Priority of App setup is senior to printer setup.

Duplex

The printer supports duplex printing of plain paper. Paper size supported by the duplex printing: A4, Letter, Legal, Folio, Oficio.

Note: • Some paper media are not suitable for duplex printing, and trying duplex printing may result in damage to the printer.

• Duplex is not available for poster printing.

• For information about the paper types and printing media in the feed tray for paper feeding, please refer to [Paper and Print Media](#).

How to print on both sides

1. Open the print job to be printed.
2. Select Print from the File menu.
3. Select printer of the corresponding model.
4. Click "Printer Properties" to configure the print setting.
5. Select "Duplex Print" under the "Basics" tab, and choose either "Long Edge" or "Short Edge" option.
6. Click "OK" to complete the printing setting. Click "Print" to print on both sides.


Print without margins

This printer supports borderless printing, so you can set the margins for the printed image by following these steps.

The operation steps are as follows:

The Windows 10 system is taken as an example in the following steps. The information indicated on your computer screen may vary from operating system to operating system.

1. Open the file you want to print. Click the "File" menu in the upper left corner. Select "Print" to bring up the print driver.
2. Select the corresponding printer model.
3. Click "Printer Properties/Preferences" to configure the printing.
4. Enter the "Paging Seal" option interface, check "For printing wit", and click "OK".

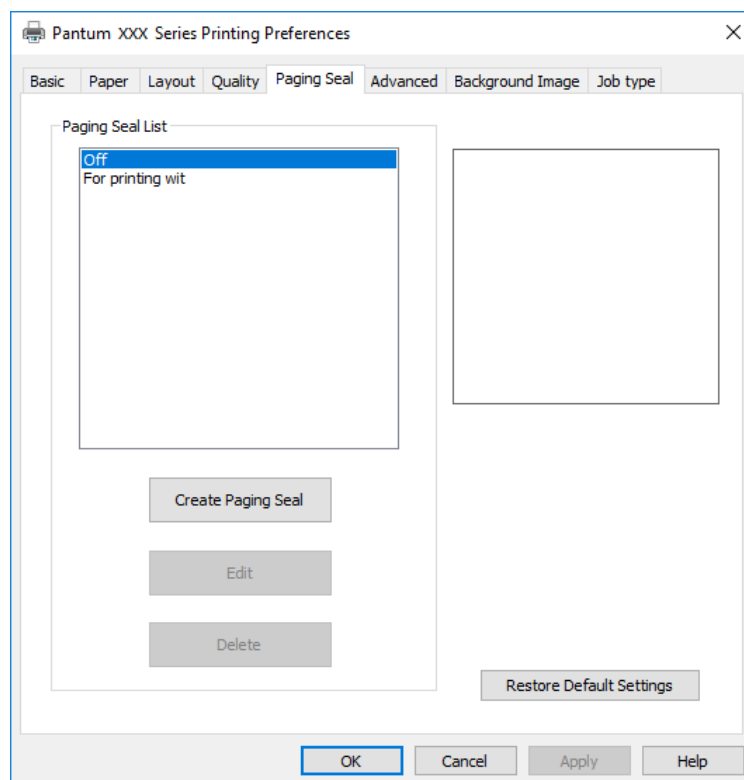


Red Header File Printing

When the red content on the printed portrait does not meet the expectation, you can try to adjust the color of the portrait via the "Red Header File Printing" function.

The operating steps are as follows:

The Windows 10 system is taken as an example in the following steps. The information indicated on your computer screen may vary from operating system to operating system.

1. Open the file you want to print. Click the "File" menu in the upper left corner. Select "Print" to bring up the print driver.
2. Select the corresponding printer model.
3. Click "Printer Properties" to configure the print setting.
4. Enter the "Quality" option interface, check "Red Header File Printing", and click "OK".

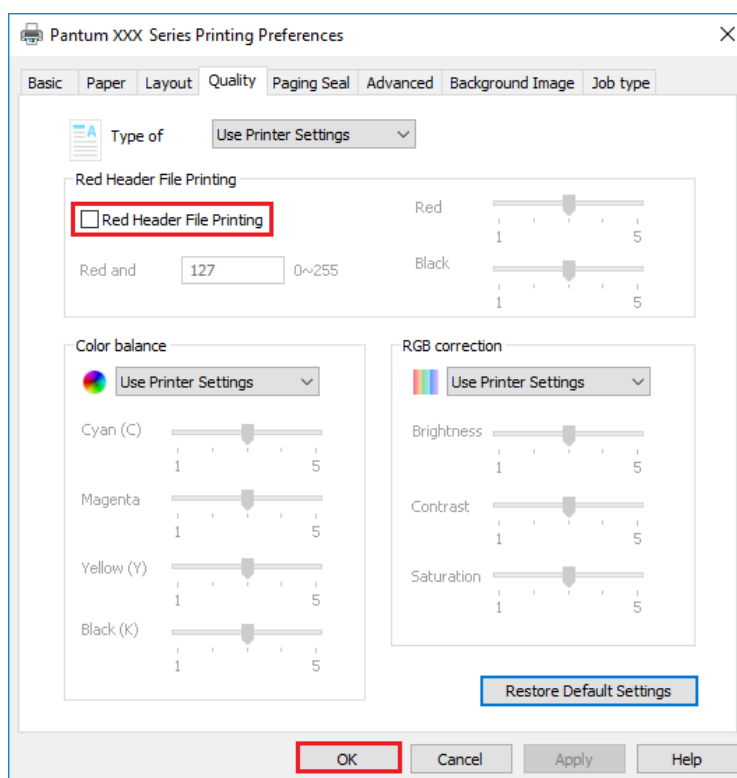

Note: • You can set the red and black threshold value (red and black threshold: 0-255) for printing originals according to your actual needs.

08 Copying

Copying function

Copying function		Instructions
Common copying	Copy source	Set the paper size of the originals.
	Copy To	Set the paper size and type of the specified tray.
	Resizing	Reduce or enlarge the size of image copied.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Duplex copying	It supports manual duplex copying for originals.
	Color	It is used for color or monochrome copying.
	Image quality	Set the definition mode to improve the copying effect.
	Multipage	Print a multi-page document to a piece of paper.
	Clone	Print several identical images to a piece of paper.
	Collated copy	Collate copies of an original.
ID copy	Color	It is used for color or monochrome copying.
	Arrangement mode	Set the Layout for Copying ID Card
	Intensity	Adjust deep-light copying effect by setting intensity.
	Paper Size	Set the paper size.
Receipt copying	Color	It is used for color or monochrome copying.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Paper Size	Set the paper size.

Common copying setting

Change related setting through setting menu for better copy result.

1. Select "Copy" button in printer control panel;
2. Determine copy setting, click "Copy" button to copy.

Note: • Once the settings options for image quality, brightness and contrast, zoom, and paper size are selected, the settings will remain in effect.


• The settings such as image quality, zoom, all-in-one, clone, collated copy and duplex copying will revert to defaults, when the copy is completed, the panel buttons are switched, or the machine is restarted.

Multipage

With setting on all-in-one feature, a 2- or 4-page document could be copied to one piece of paper. Copying with the ADF and the glass platen are both supported.

The multipage includes 3 modes:

(1)Two-in-one:

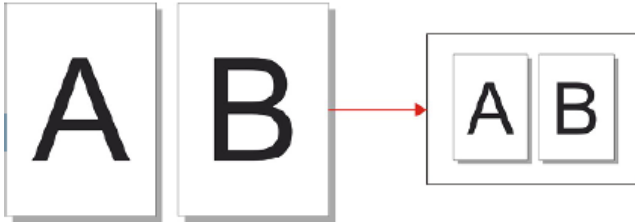

(2)Horizontal four-in-one:



(3)vertical four-in-one:



Note: • "Multipage" and "resizing function" cannot be set at the same time.


Collated copy

The "Collated Copies" feature supports only copying with the automatic document feeder (ADF). The collated copy includes 2 modes:

Startup:



Closed:

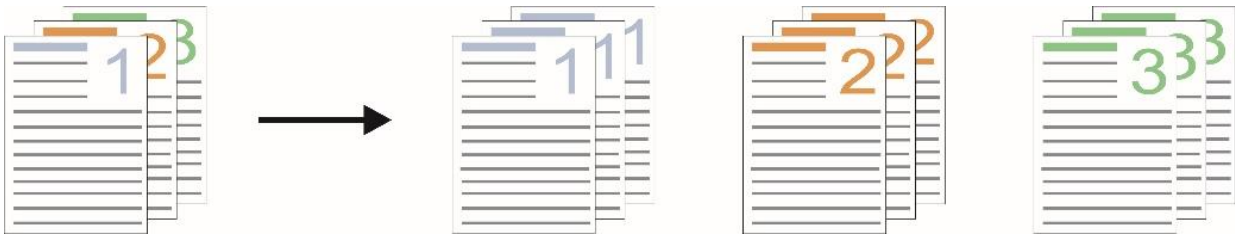


Duplex copy

You can use the glass platen for manual duplex copy.

There are 4 modes in total for duplex copying:


1. One-sided → One-sided:

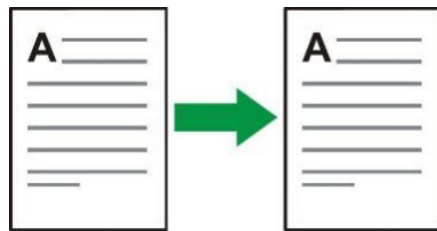


2. One-sided → Two-sided:



3. Two-sided → One-sided:

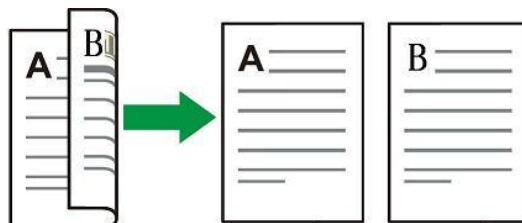

4. Two-sided → Two-sided:

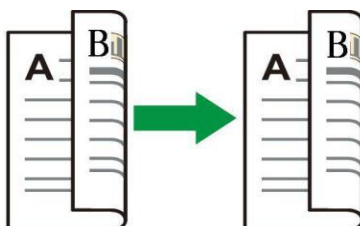


manual duplex copying

In case of manual duplex copying of original, choose ADF mode.

Steps to use Manual Duplex Original Copying


1. Put an original into the ADF with its front upward and its top fed first; meanwhile, make sure there are some paper in the carton.

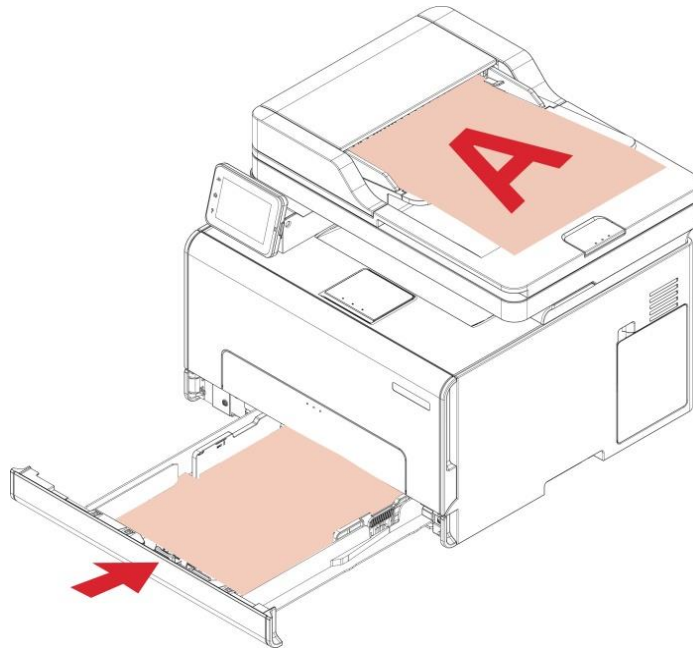

2. Operate in accordance with the procedure of ordinary copy; choose the “manual duplex copy” mode and press “OK” to save the settings.


3. Click “Copy” button to copy.

4. Paper exited should be with the direction as shown in the figure:

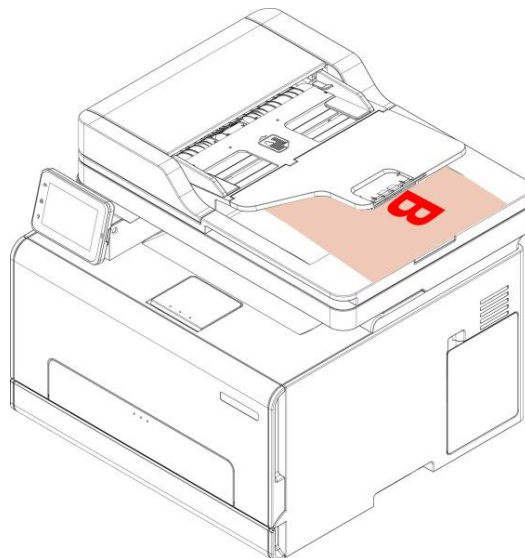

5. After completion of copying one side, put the paper into the entrance as shown in figure (without turnover or rotation).

Note: • If the turnover prompt on panel times out, the machine will execute one-sided copying automatically.

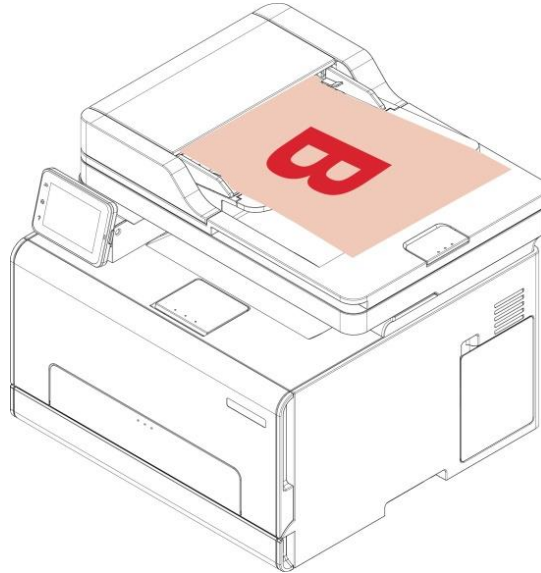

6. Press "Start" to begin copying the other side.

ID copy settings

For better copying effects, you can change the corresponding settings via the "ID Copy Settings" menu.

1. Select "ID Copy" button in printer control panel;
2. Determine copy setting, click "Copy" button to copy.

Receipt setting

For better copying effect of bills, you can enter the "Bill Copy Setting" menu to change relevant settings.

1. Select "Bill copy" button in printer control panel;
2. Determine copy setting, click "Copy" button to copy.

09 Scan

This printer provides two types of scan: "Push Scan", which means scanning through the printer's Control Panel operations; "Pull Scan" which means scanning through PC terminal scanning the application. Before scanning, please be sure a printer driver has been installed in the computer. This product complies with the TWAIN and Windows Image Application (WIA) standard. If using the application which supports TWAIN and WIA standard, users can use the scan function and directly scan the images to the open application.

Pull Scan


You can scan from the PC scan application via USB, wired, or wireless connection. Make sure the printer is properly connected before scanning.

Windows system scan

Pantum Scan Application

Operation Steps:

1. Double click on "Pantum Scan Application" on the computer.
2. The prompt window is shown as below:

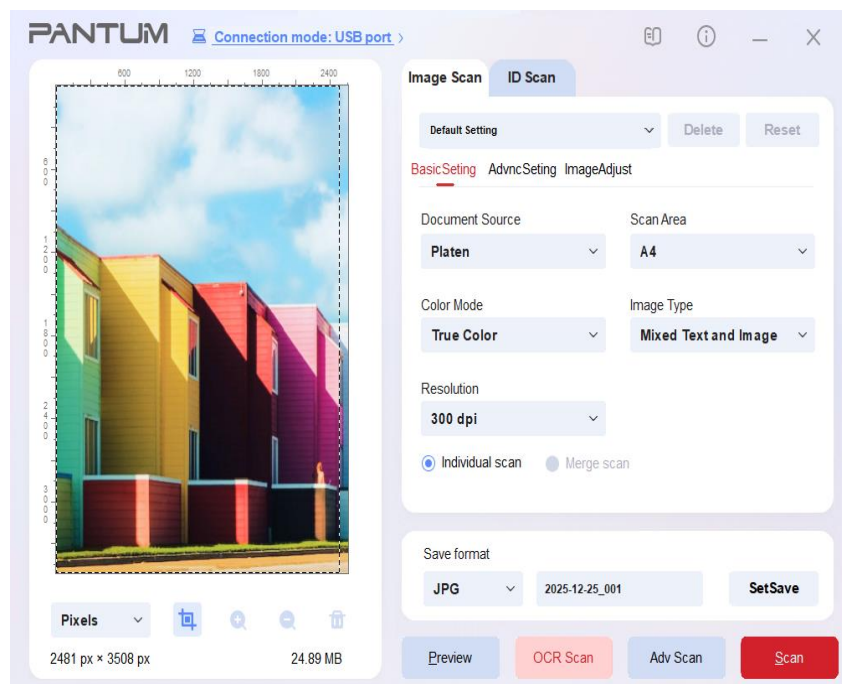

3. Set Scan in the right list. Click "Scan" on the bottom right corner and start scan.

Note: • Images in the format of BMP, JPG, TIF, PDF, PNG, and OFD can be scanned by the Pantum scanning application software. The image text recognition is available for documents in the format of DOCX, XLS, XLSX, PPTX, TXT and searchable PDF. (If you need to use the image text recognition function, please download and install the OCR software according to the interface prompts after the driver installation. For the installation method, please refer to [Driver Setup](#))

macOS System Scan

ICA Scan

Open ICA via "Print and Scan"

Operation Steps:

1. After installing the printer driver, click "System Preferences" icon on the bottom left corner of the computer desktop.
2. After the window pops up, click on "Print and Scan".
3. After the pop-up window appears, select the desired printer and click the "Scan" button.
4. Click on "Open Scanner" and the scan window will pop up.
5. Click on "Show Details" on the bottom right corner to set the scan parameters.
6. Click on "Scan" on the bottom right corner and start scan.

Call ICA through applications

Operation Steps:

1. Click on "Finder" icon on the bottom left corner of the computer desktop, Find "Image Capture" in "Applications", and click to launch the application.
2. After the window pops up, set the scan information in the right list of "Basic Setting" and "Advanced Setting". Click on "Scan" and start scan.

TWAIN Scan

Take Photoshop as an example. (CS2 and earlier versions are supported)

Operation Steps:

1. Launch Photoshop, click on "File" – "Import" on the top left corner and select TWAIN Scan.
2. After the window pops up, set the scan information in the right list of "Basic Setting" and "Advanced Setting". Click on "Scan" and start scan.

Push Scan

This section is mainly to introduce how to scan files to PC, E-mail, FTP, SMB and USB with the printer's control panel.

Note: • Files supported in scanning into the PC/Email/FTP/SMB/USB flash disk: PDF, PDF/A, TIFF, JPEG, and OFD.

Scan to PC

You may operate the printer's control panel to scan a file to PC.

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Put an original on the glass platen or into the ADF.
3. Click "Scan-Scan to PC" in printer control panel.
4. Select proper scan setting, click "Scan" button to make a scan.
5. If you want to perform a merge scan, place the documents that you want to continue scanning on the glass platen, press the "Start" button and proceed with scanning the second page. (ADFsd can make scan continuously without interruption.)

Note: • "Scan to PC" supports both USB and WiFi connections.

Scan to E-mail

You can scan the file as an attachment into the email application. The steps are as follows:

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Set up SMTP client.
3. Configure the E-mail address book
4. Put an original on the glass platen or into the ADF
5. Click "Scan-Scan to Email" in printer control panel.
6. Select proper scan setting, click "Scan" button to make a scan.
7. If you want to perform a merge scan, place the documents that you want to continue scanning on the glass platen, press the "Start" button and proceed with scanning the second page. (ADFsd can make scan continuously without interruption.)

Instructions for settings of group e-mail sending:

Set the group name for group e-mail sending by webpage, and set the members, i.e. the receivers, in the group of group email. After finishing scanning, firmware will send the scanned documents to the mail server. Then mail server sends the documents to every member of the group.

Scan to FTP

Be sure the user is in an Internet-connected environment in scanning files to FTP server. If you want to scan large files, you may need to input the server address, user name and password to log in the server, with specific operation steps as below:

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Configure the FTP address book
3. Put an original on the glass platen or into the ADF
4. Click "Scan-Scan to FTP" in printer control panel.
5. Select proper scan setting, click "Scan" button to make a scan.
6. If you want to perform a merge scan, place the documents that you want to continue scanning on the glass platen, press the "Start" button and proceed with scanning the second page. (ADFsd can make scan continuously without interruption.)

Scan to SMB

To use “Scan to SMB” function, you need to create a shared folder on the Windows or Mac computer first.

Create a shared folder

Windows 7 is taken as example for description of the following steps.

1. Right click the folder under Windows system you want to share, and select Properties.
2. Select the “Share” tab, and click “Share”.
3. In the pop-up “Network Access” window, click the drop-down menu, select “Everyone”, and click “Add”.
4. Change the “Everyone” permission level added in Step (3) to “Read/Write”, and click “Share (H)” in the lower right corner.
5. If your shared folder path is displayed at the network path, it means it is successfully shared.

“Scan to SMB” configuration


1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. To configure SMB address book (It can be configured via Web server.)
3. Put an original on the glass platen or into the ADF.
4. Click “Scan - Scan to SMB” on printer control panel.
5. Select proper scan setting, click “Scan” button to make a scan.

Scan USB drive

This printer supports scanning files to USB without a computer. Before operation, please make sure the USB has enough storage space.

The specific operation steps are as follow:

1. Insert the USB into the printer's front USB interface.

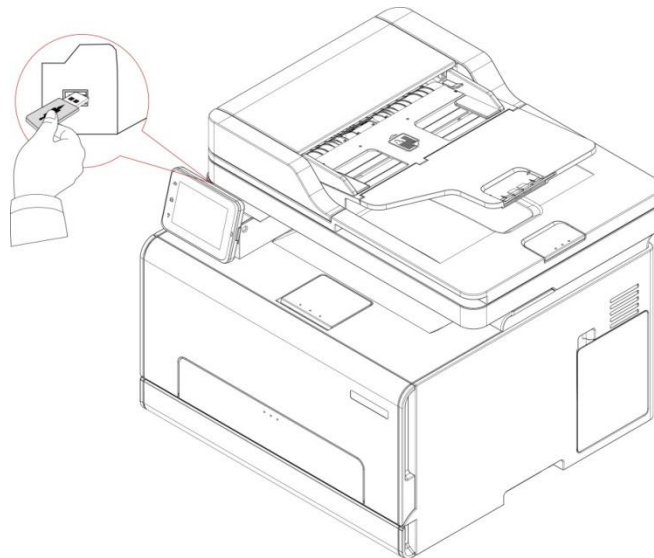

2. Put an original on the glass platen or into the ADF

3. Click "Scan-Scan USB" in printer control panel.

4. Select proper scan setting, click "Scan" button to make a scan.

A "PantumScan" folder will be created in the USB flash disk. The scanned file will be saved in the PDF, TIFF or JPEG format.

Note: • USB formats supported: FAT and FAT32 for Windows system and MS-DOS (FAT) for macOS system.


10 Routine Maintenance

Note: • Printer appearance may differ because of different models and functions, so the schematic diagram is only for your reference.

Cleaning the Printer



:Some parts of the printer are still in high temperature within a short time after use. To prevent burns, please don't directly touch places labeled with high temperature warning in contact with internal components after opening the printer's front or rear cover.

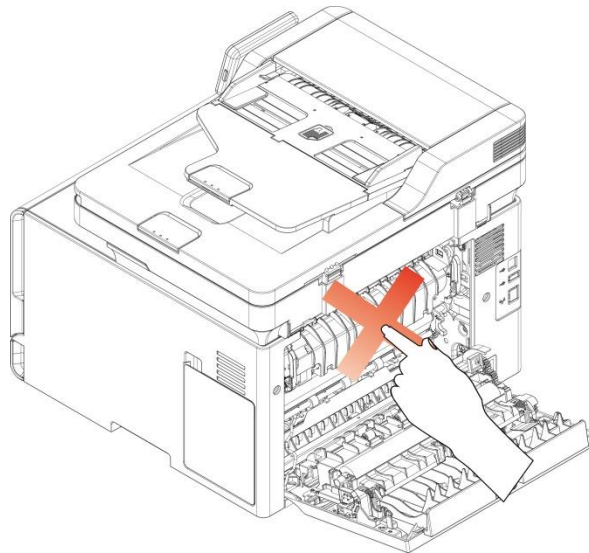

Note: • Disconnect the printer before cleaning.

- Please use mild detergents.

- Use caution when using the printer display to prevent pressing or damaging the touch display.

Please use a soft dry cloth or dip in a neutral detergent or ethanol to clean the display surface. Do not use any organic solvents, acidic or alkaline solutions for cleaning.

Cleaning the printer




:To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.

Note: • Please perform this job every few months.

- Damage to the printer caused by improper handling is not covered by the printer warranty.


1. Turn off the printer, and then unplug the power cord from the electrical outlet.

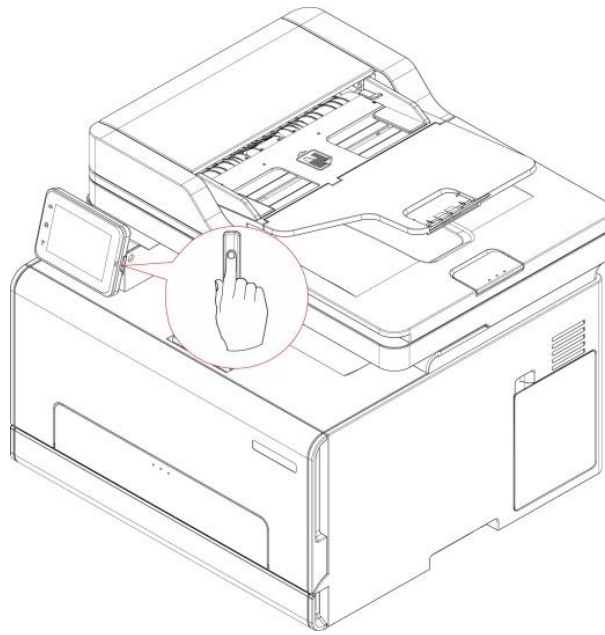

2. Remove the paper from the standard exit and feed tray.

3. Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.

4. Wipe the outside of the printer with a damp, soft, lint-free cloth.

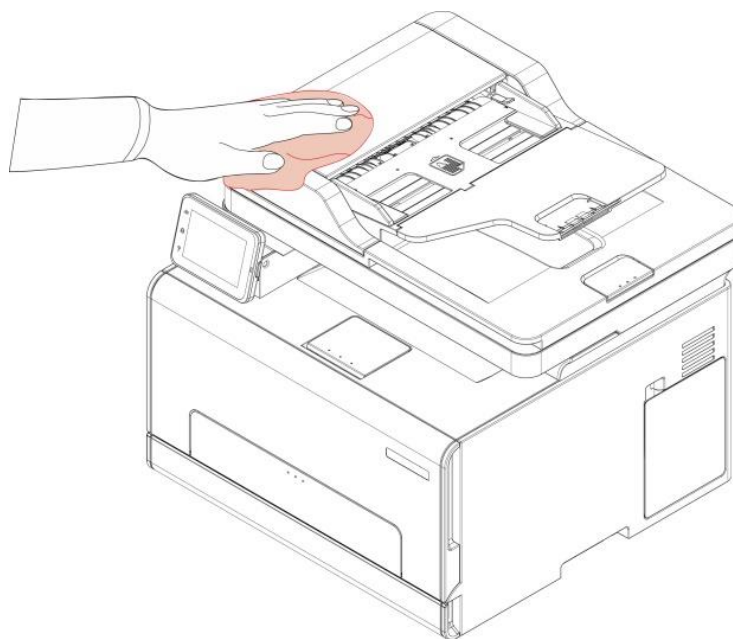

Note: • Do not use household cleaners or detergents, as they may damage the surface of the printer.
• Make sure that all areas of the printer are dry after cleaning.


5. Connect the power cord to the electrical outlet, and then turn on the printer.




:To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

ADF cleaning


Note: • the machine with the ADF should be regularly cleaned, removing dirt on the top cover of the ADF.
Please wipe the place as shown in figure with a soft cloth.

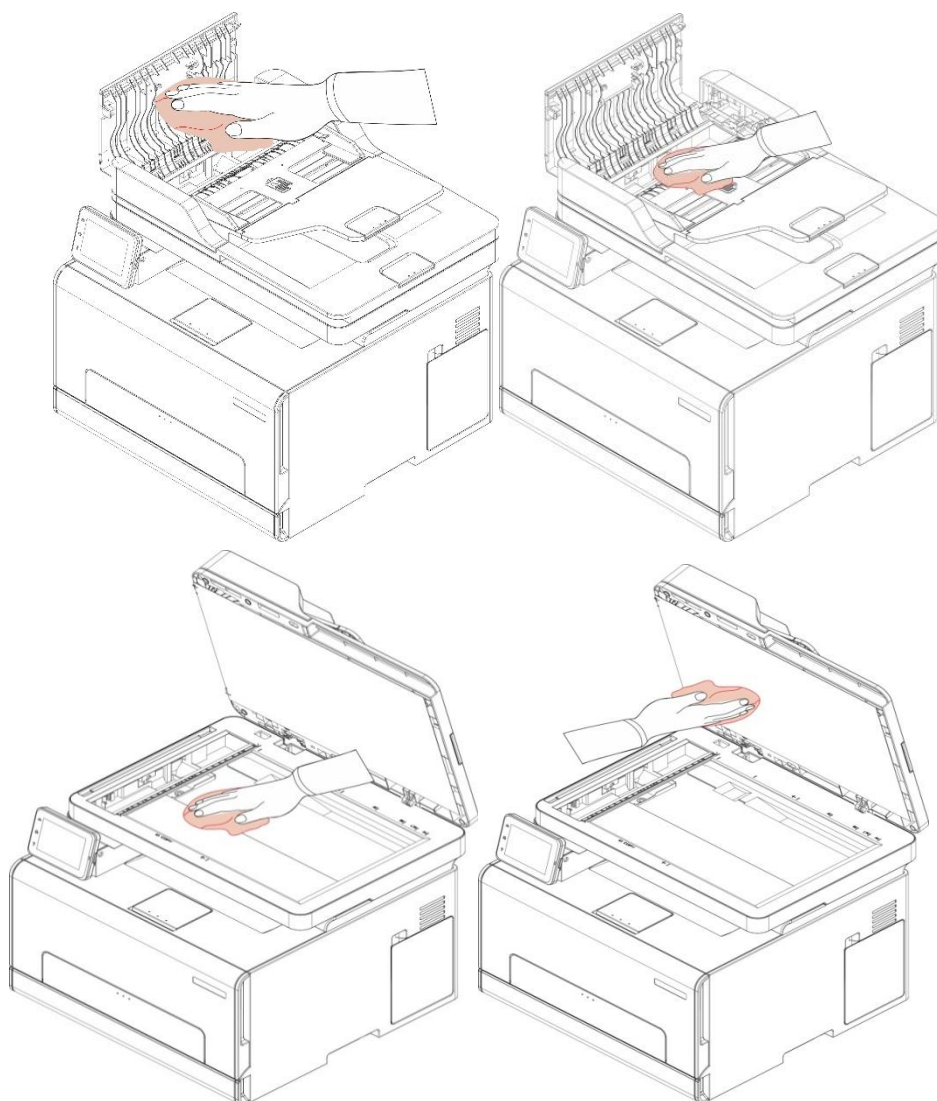

1. Use a soft cloth to wipe the outside of the printer clean.

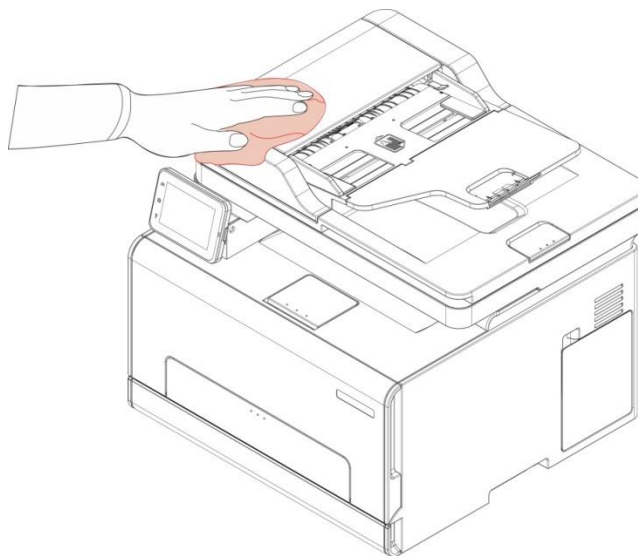

2. Open the scanner cover and then wipe the glass platen gently with a soft cloth.

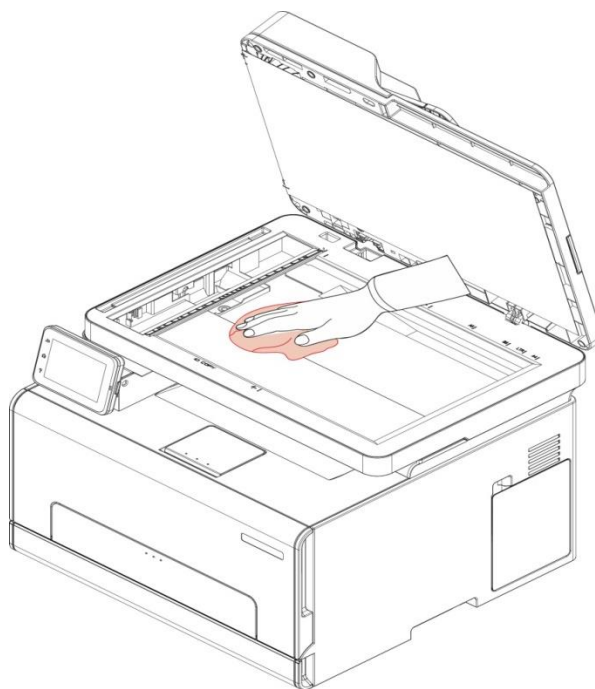

Replacing parts and consumables

1. Use and maintenance of toner cartridge.

Please use the original toner cartridge for better printing quality.

Please pay attention to the following items while using the toner cartridge:

- Please keep the toner cartridge in a dry and dark place.
- Do not refill the toner cartridge without permission; otherwise, the damages caused will not be included in the scope of warranty of the printer.
- Please place the toner cartridge in cool and dry places.
- Please do not place the toner cartridge near ignition sources, as the toner inside it is inflammable and may cause fire.
- Please pay attention to toner leakage while it is taking out or disassembled. In case of toner leakage, skin contact with toner or spattering into eyes or mouth, please wash it with clear water immediately, or see a doctor if feeling unwell.
- When placing the cartridge, please stay away from children may contact area.



2. Service life of toner cartridge

- The service life of toner cartridge is depending on the toner quantity needed by printing.
- When the touch screen shows "Toner Cartridge Exhausted", it means that the toner cartridge is nearly exhausted. Please replace the toner cartridge.


Replacing the toner cartridge

Note: • If the tray is unfolded, remove it before replacing the toner cartridge.



1. Open the front cover, and then push it down hard.

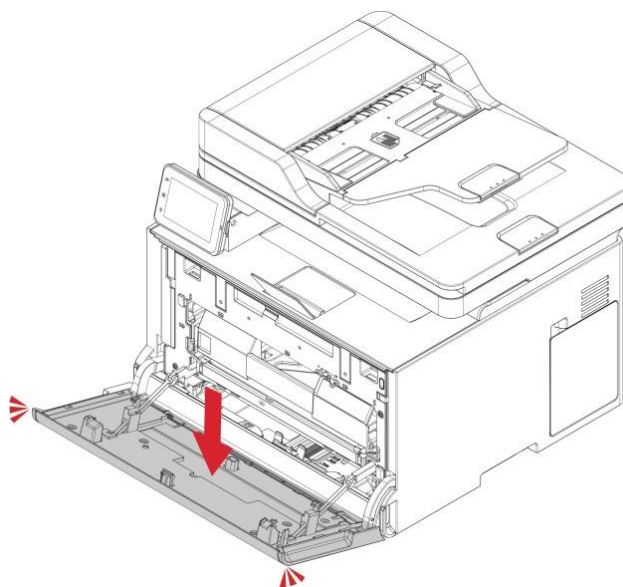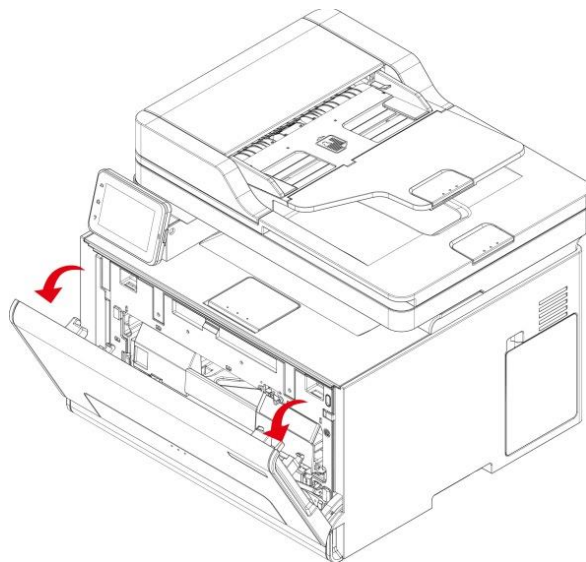

2. Pull out the toner cartridge tray.

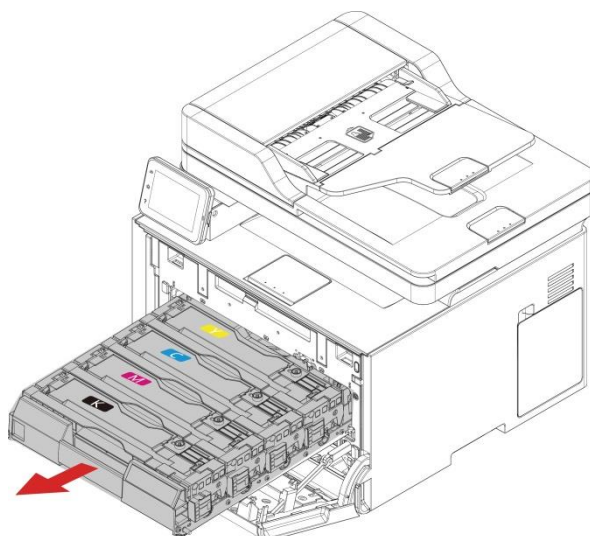


3. Remove the used toner cartridge.

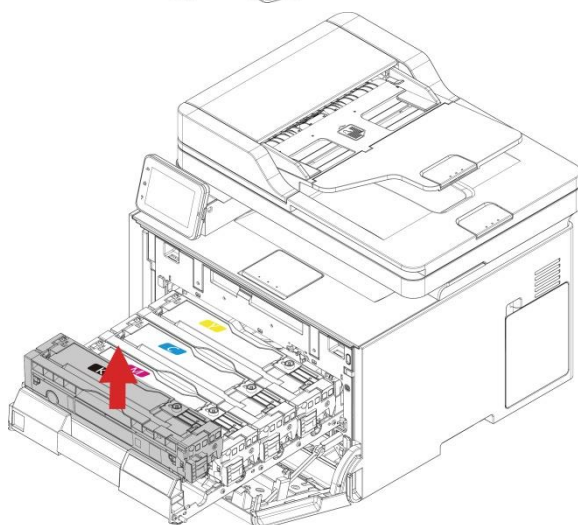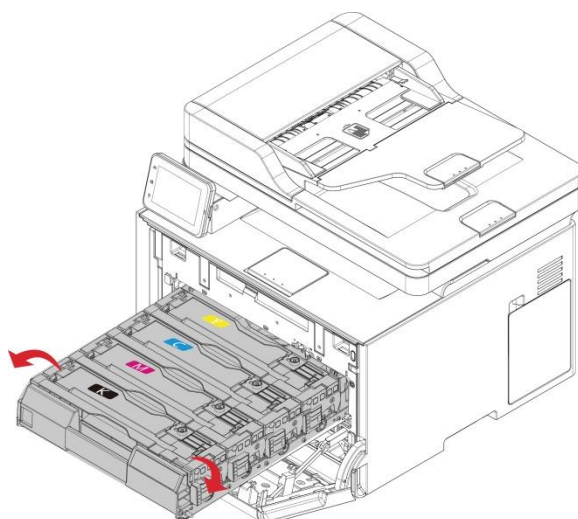


4. Unpack the new toner cartridge.



Note: • Do not expose the bottom of the toner cartridge to direct light. Prolonged exposure to light may cause print quality problems.
• Do not touch the bottom of the toner cartridge. Otherwise it will affect the quality of future print jobs.

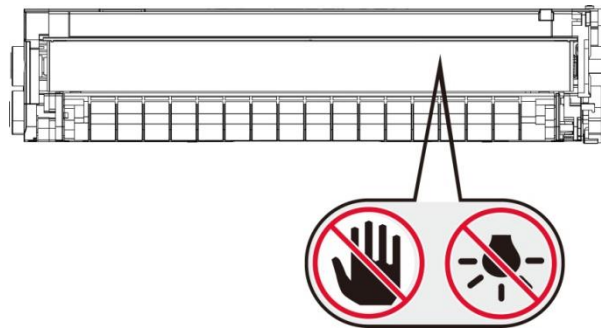

5. Insert a new toner cartridge.

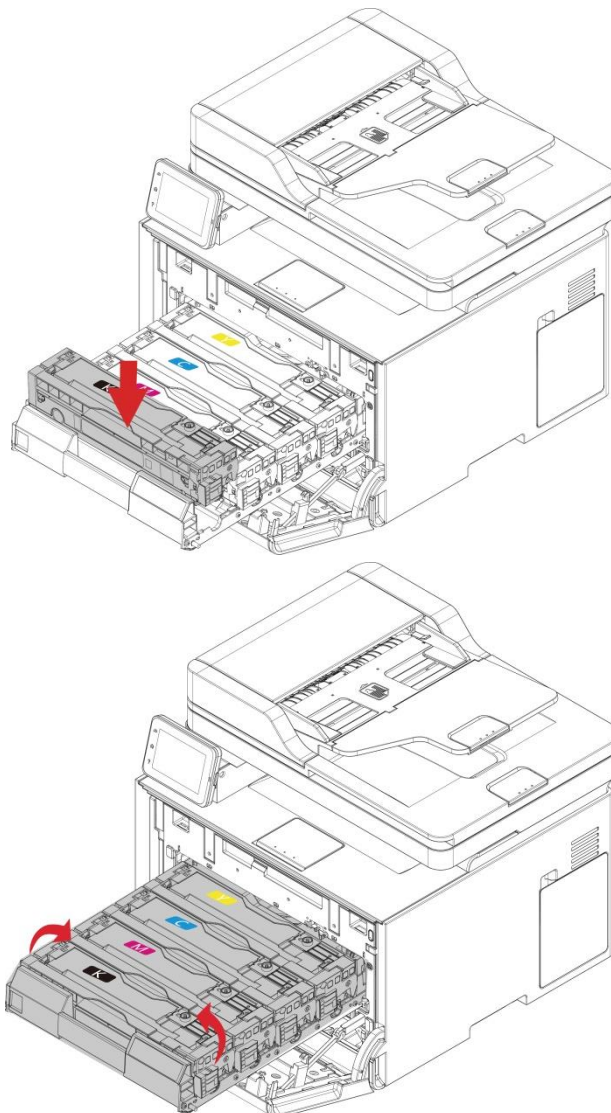


6. Insert the toner cartridge tray, and then close the cover.

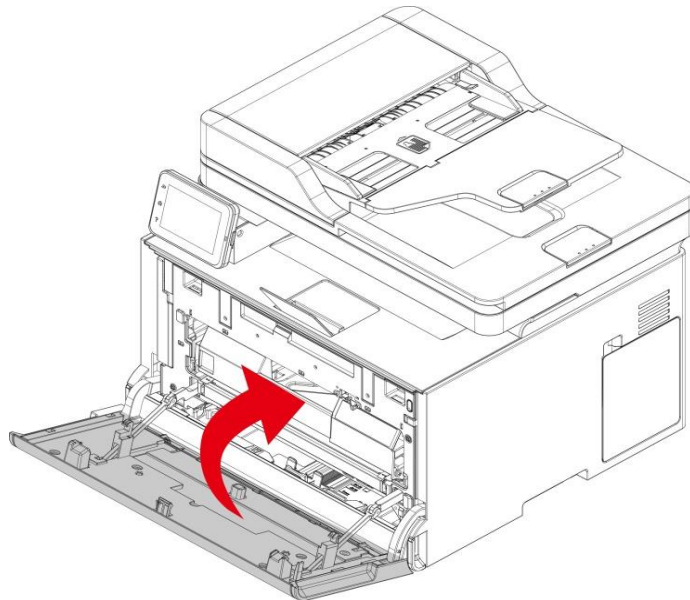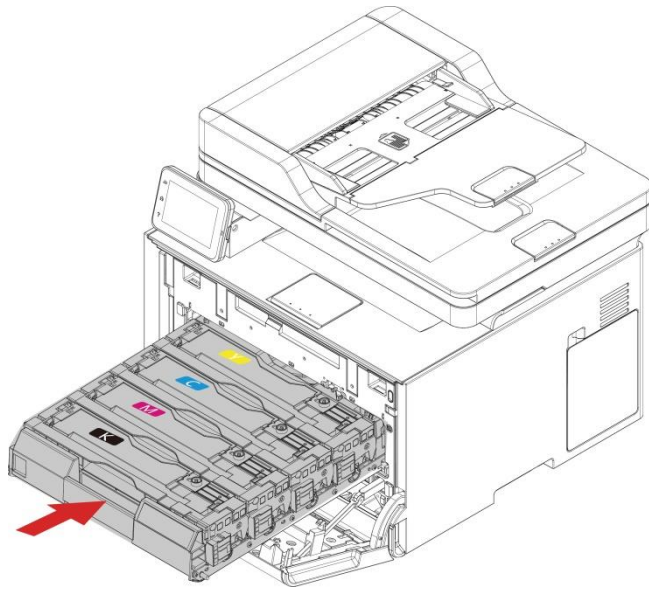


Replacing the waste toner bottle

1. Remove the used waste toner bottle.

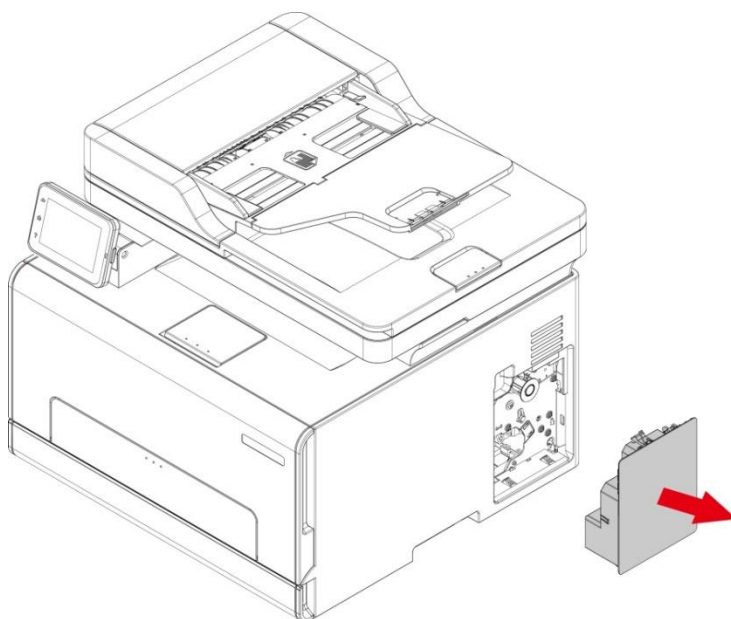


Note: • To avoid toner leakage, keep the waste toner bottle upright.

2. Unpack the new waste toner bottle.
3. Insert a new waste toner bottle.

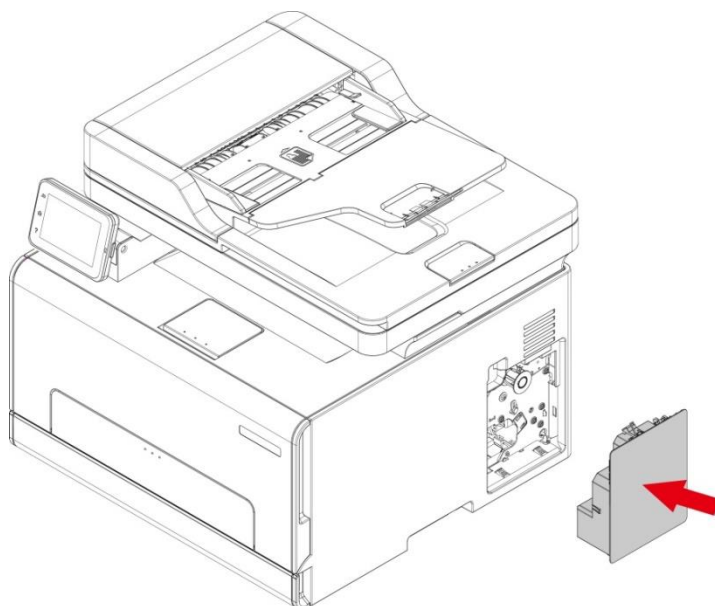


Replace the tray

1. Remove the used tray.

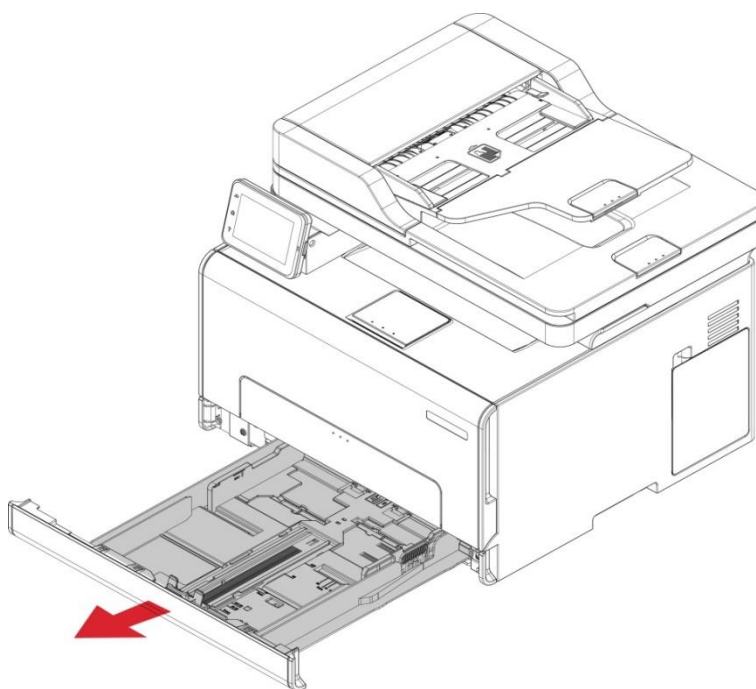

2. Unpack the new tray.
3. Insert a new tray.

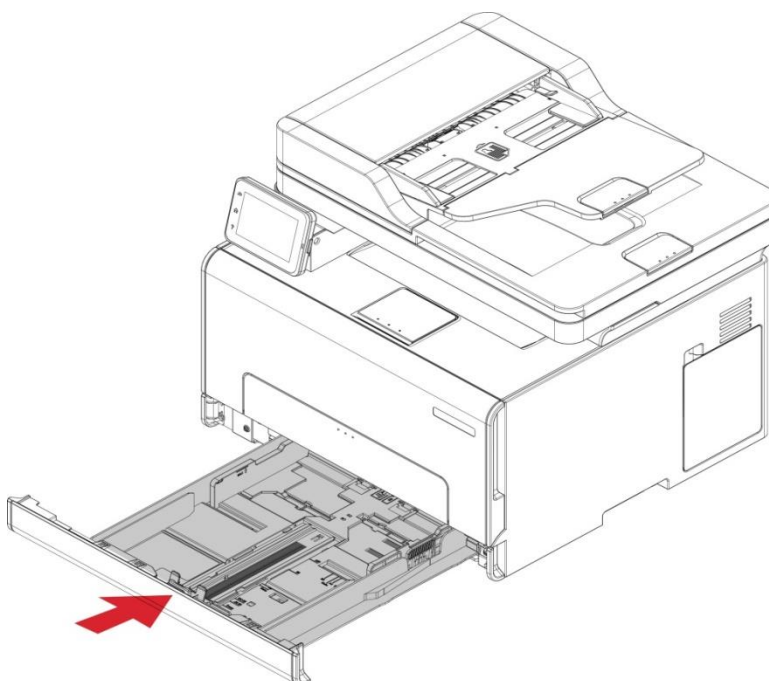

Move the printer

Move the printer to another location



:To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



:If the printer weighs more than 18 kg, then it requires two or more trained personnel to lift it safely.



:To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



:When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all covers and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has casters on its base, then carefully move it to the new location. Use caution when passing over thresholds and breaks in flooring.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Keep the printer upright.
- Avoid violent vibrations when moving.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.

Note: • Damage to the printer caused by improper handling is not covered by the printer warranty.

Transporting the printer

When transporting the printer, use the original packaging.

11 Troubleshooting

Please read this section carefully. It may help you to solve common problems encountered during the printing process. If the problems persist, please contact Pantum Aftersales Service Centre.

Prior to handling common problems, first check that:


- The power cord is connected correctly and the printer is powered on.
- All of the protective parts are removed.
- The toner cartridge is installed correctly.
- The paper is correctly loaded into the tray.
- The interface cable between the printer and the computer is connected correctly.
- The correct printer driver has been selected and installed properly.
- The computer port is properly configured and is connected to the correct printer port.

Avoiding jams


Correct loading of paper

- Make sure that the paper lies flat in the tray.


Correct loading of paper

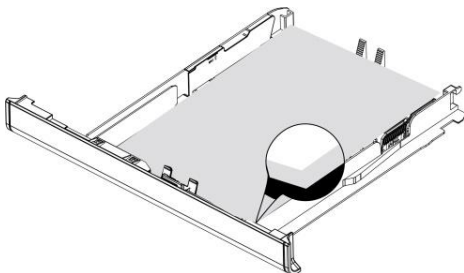

Incorrect loading of paper

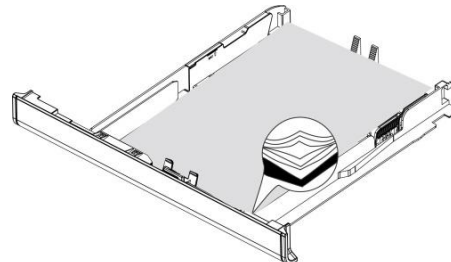


- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum paper fill indicator.
- Do not slide paper into the tray. Load paper as shown in the figure.

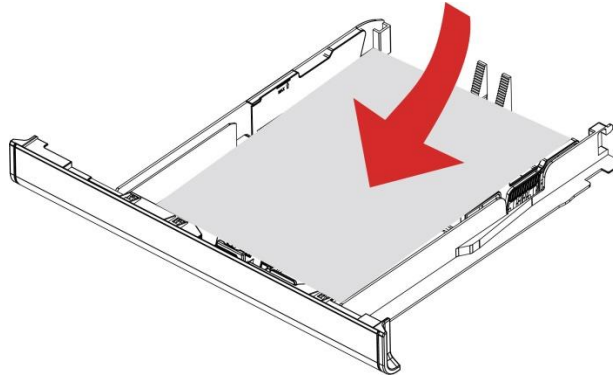

- Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.
- After loading the paper, push the tray into the printer.


Use recommended paper

- Use only recommended paper or special media.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan out and align the paper edges before loading.

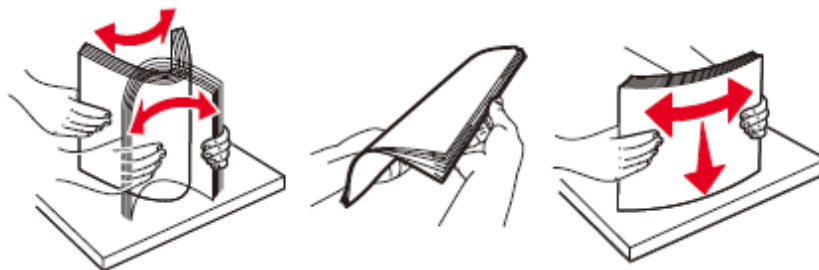

- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

Locate jammed paper

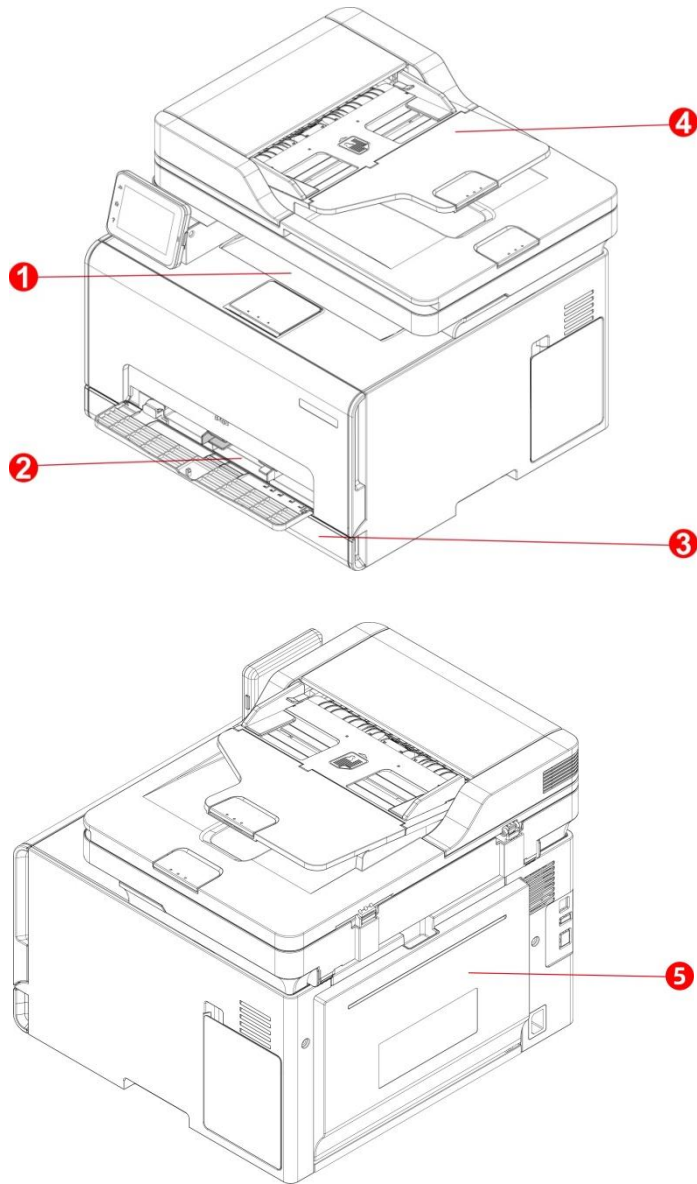


No.	Paper jam locations
1	Standard exit
2	Multipurpose feed tray
3	Standard feed tray
4	Automatic document feeder (ADF)
5	Rear cover

Cleaning Jammed Paper


The paper is jammed in the standard feed tray

1. Remove the tray.

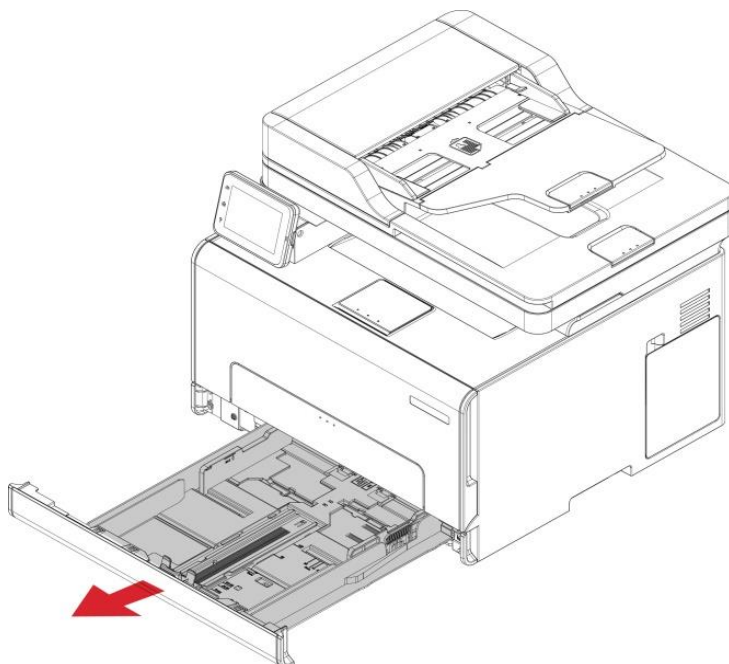

2. Remove the jammed paper.


Note: • Make sure that all paper fragments are removed.

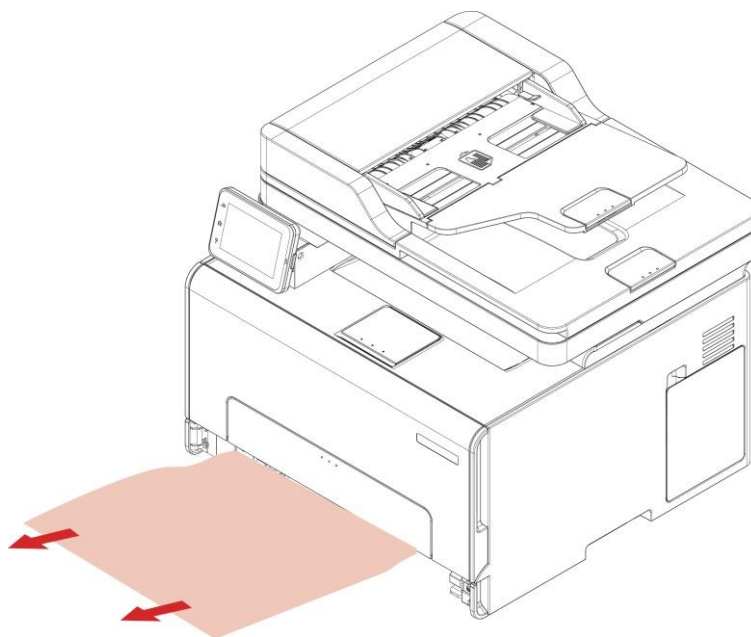

3. Insert the tray.
4. Open the rear cover.




The inside of the printer might be hot. To reduce the risk of injury by a hot component, allow the surface to cool before touching it.

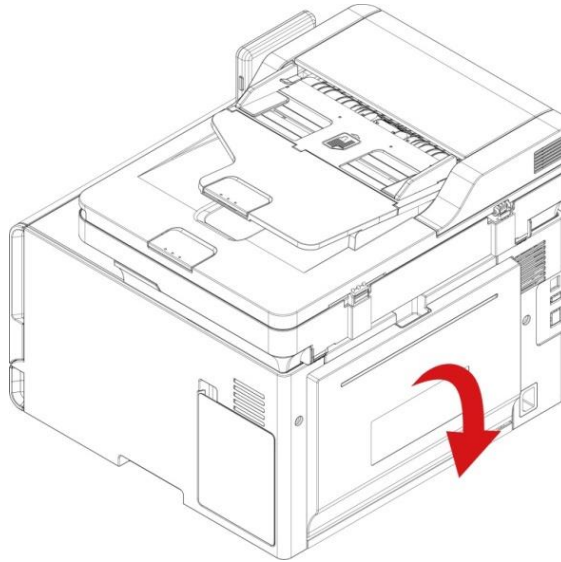

5. Remove the jammed paper.


Note: • Make sure that all paper fragments are removed.

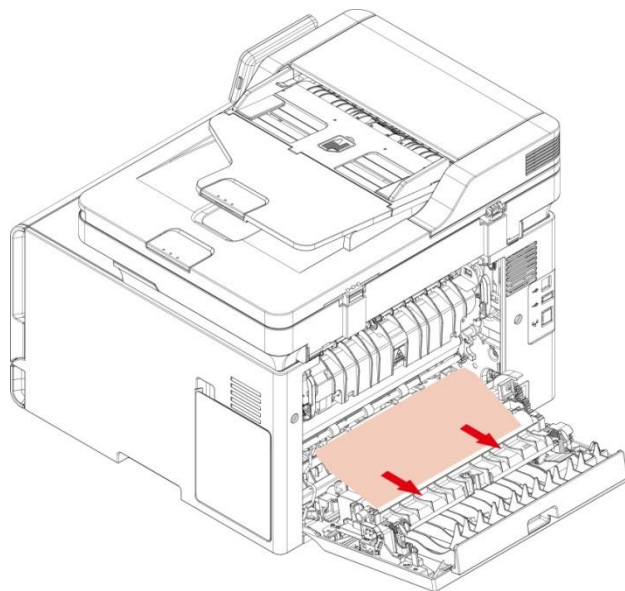


6. Close the cover.

The paper is jammed in the manual feed tray


1. Remove the standard feed tray and press the blue unlock button on the left.

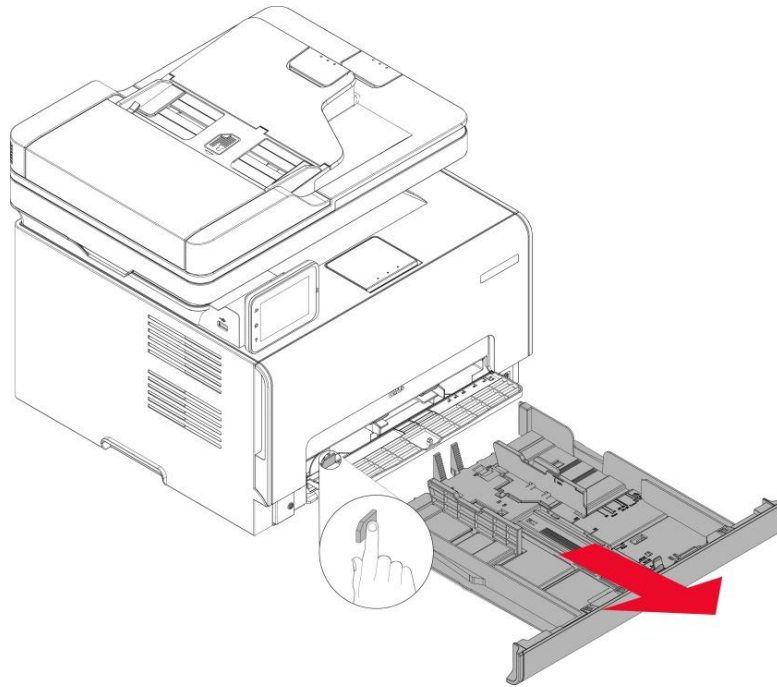


2. Pull out the jammed paper.

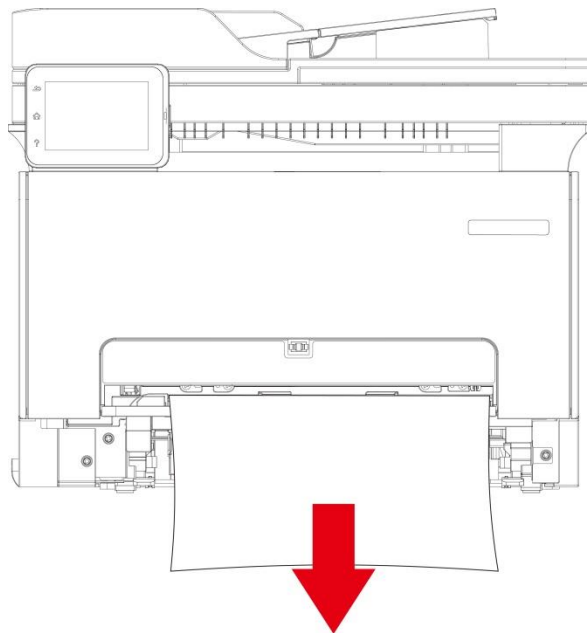

3. Press and push up the metal plate to return it to its original position.

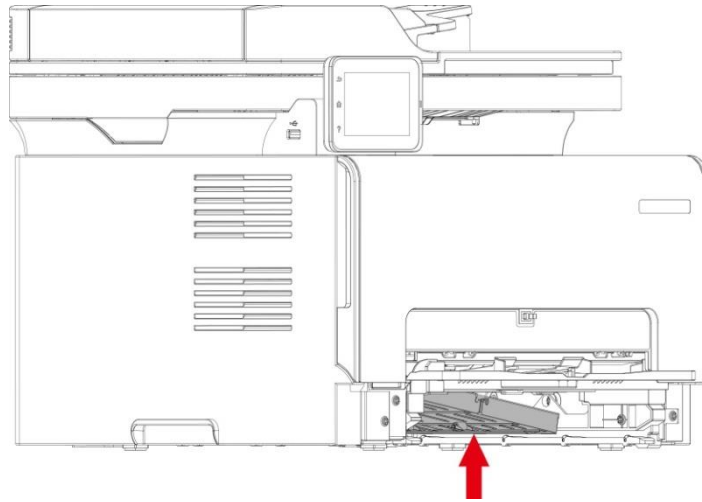


4. Push the standard feed tray in.

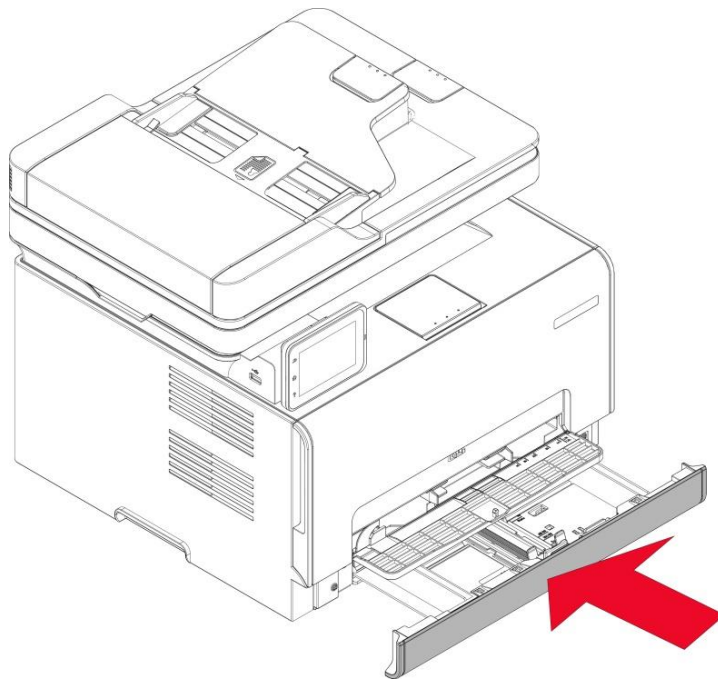


The paper is jammed in the multi-purpose feed tray

1. Open the front cover, and then push it down hard.

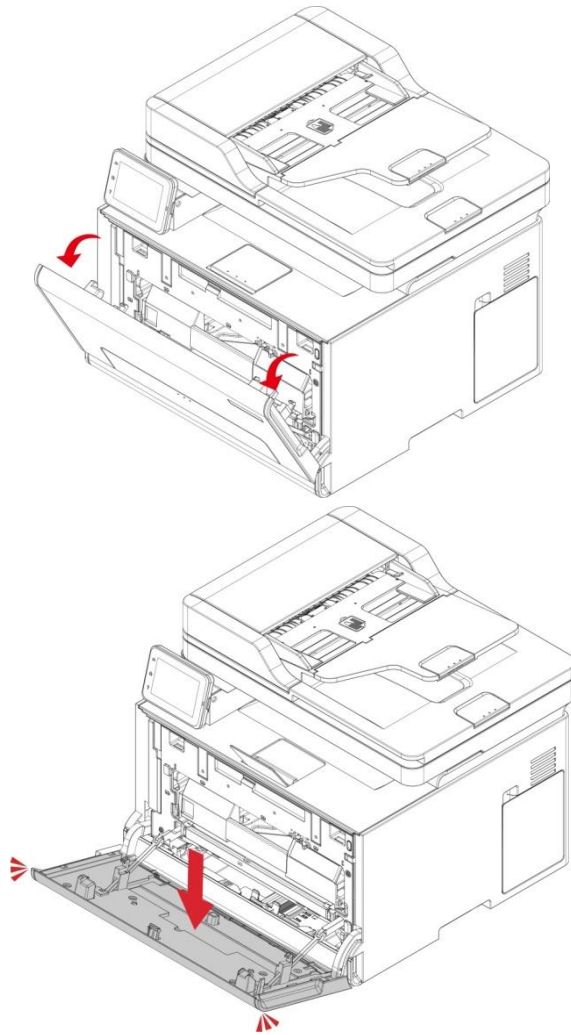

2. Remove the jammed paper.

Note: • Make sure that all paper fragments are removed.

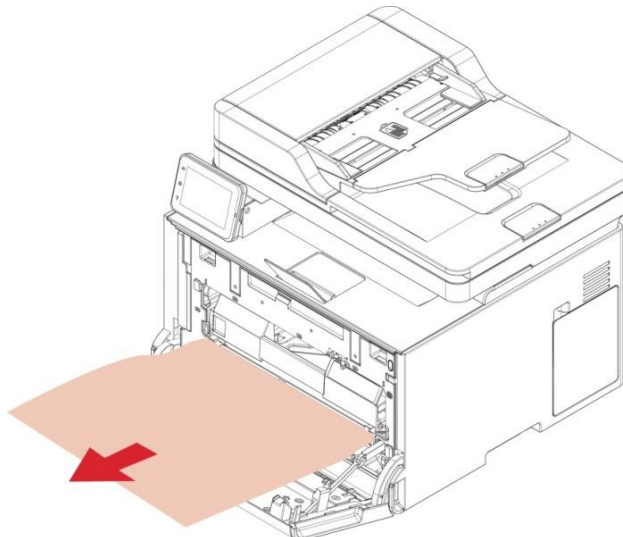


3. Close the front cover.

Paper jam in the rear cover

1. Open the rear cover.



: The inside of the printer might be hot. To reduce the risk of injury by a hot component, allow the surface to cool before touching it.

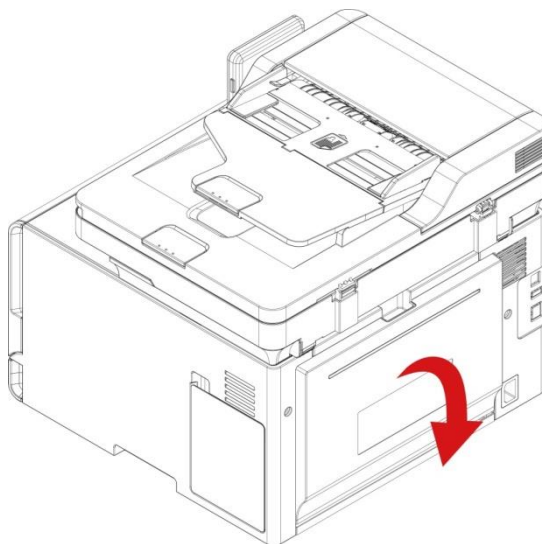



2. Remove the jammed paper.

Note: • Make sure that all paper fragments are removed.


- Fuser area

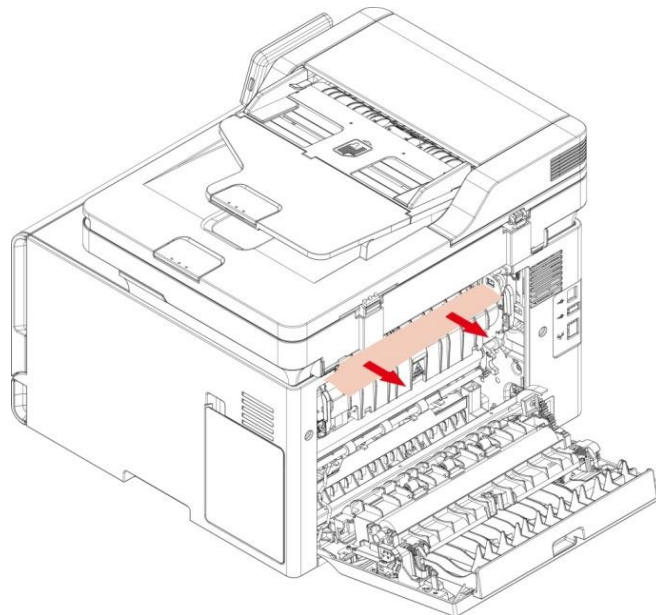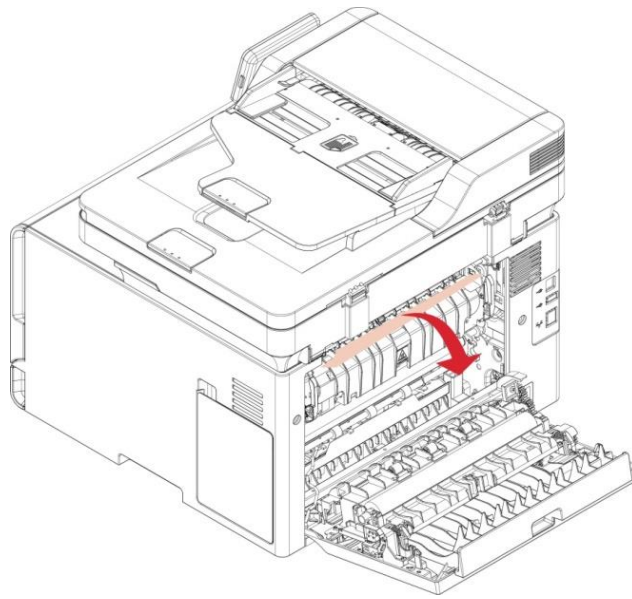

- Below the fuser area

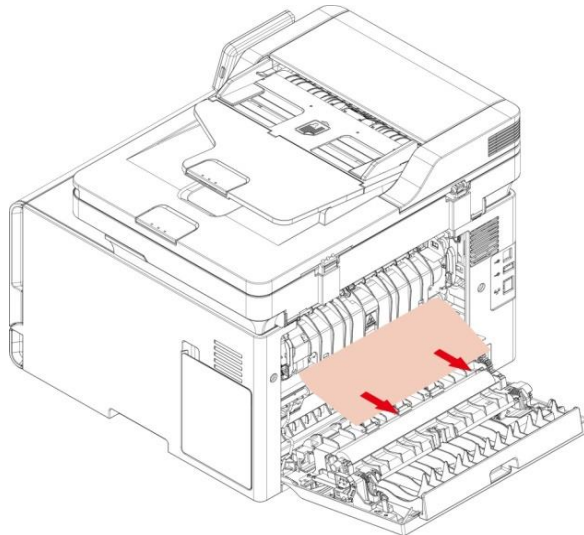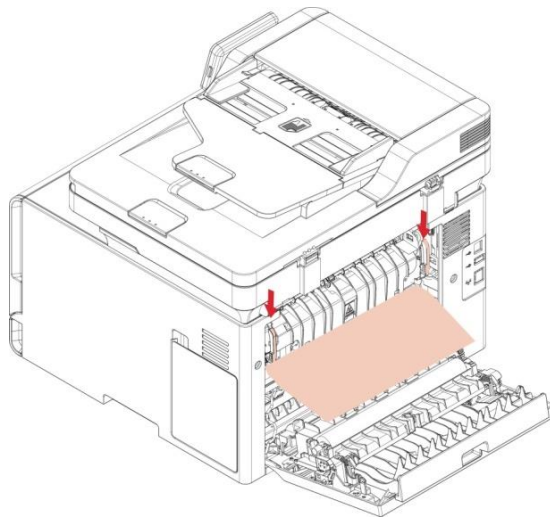


- Duplex unit

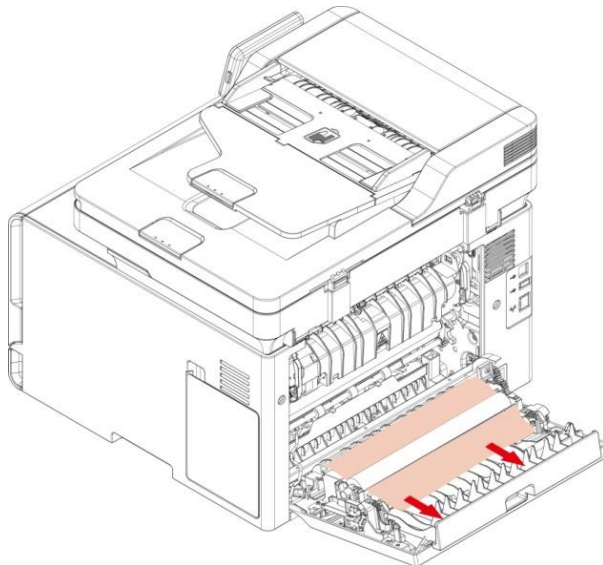


3. Close the cover.

Paper jam in the automatic document feeder (ADF)


1. Open the ADF's top cover.

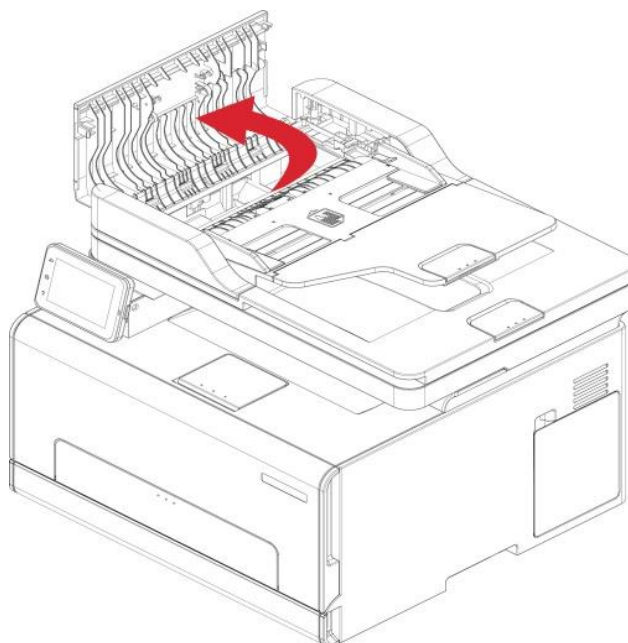


2. Remove the paper jammed from the ADF.

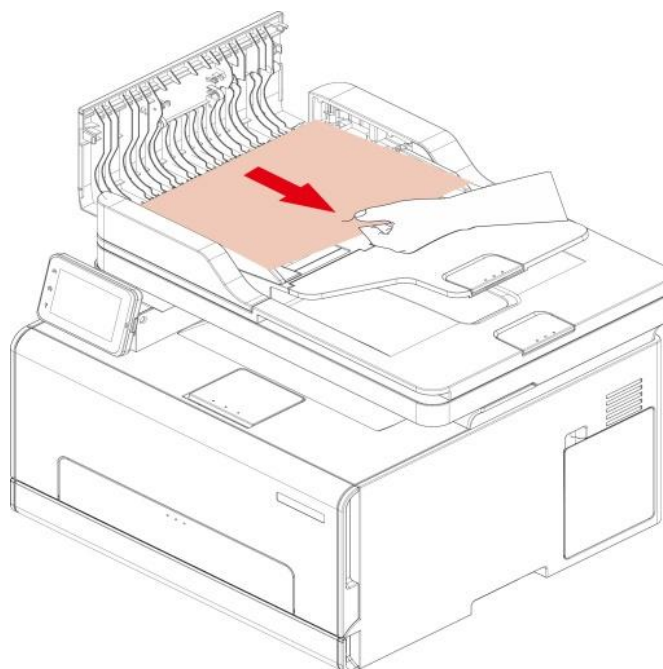

3. After removing the paper jammed, close the top cover and then the printer will be back to the ready state.

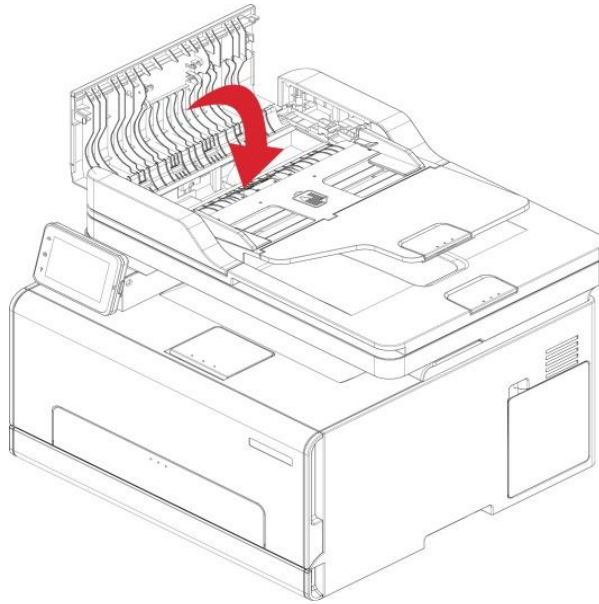

4. If it is difficult to remove the paper jammed, please try to open the scanner cover and remove it from the pressing block.

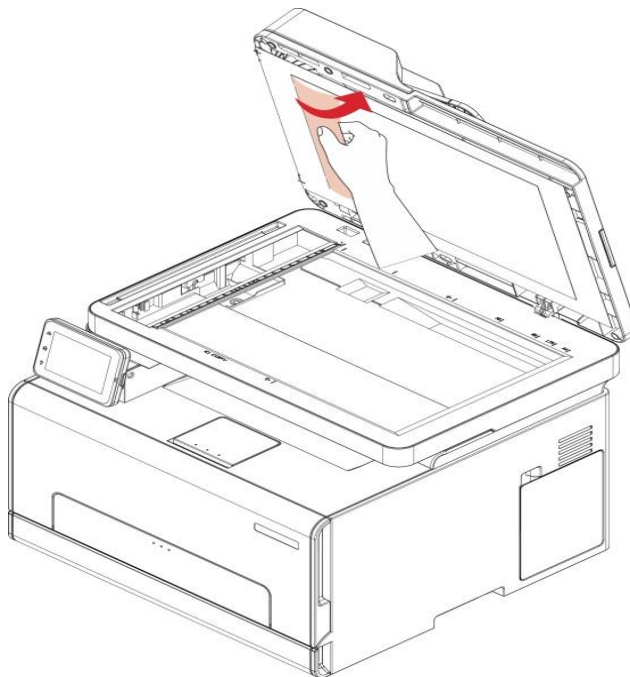

Software Failure

Problem	Solution
The printer icon does not appear in the "Devices and Printers" folder.	Reinstall the printer driver. Ensure that the USB interface cable and the power cord are properly connected.
The printer is in Ready mode but it will not perform any print job.	If the failure still exists after restarting the printer, please reinstall the printer driver. Make sure the network cable or USB cable is connected correctly.
Failed to install the driver	Check whether the print spooler service is enabled. Check the power supply and the connection of the printer.
The driver cannot be used if the IP address of the printer has been changed	Modify the port IP address of the printer driver. If the above method does not work, please reinstall the printer driver. It is recommended that a fixed IP address should be set to the network printer. In the DHCP network, it is recommended to bind the IP address with the MAC address of the printer.

Error Message

Error Message	Cause	Measure
No toner cartridge is installed.	The toner cartridge is not installed correctly or the toner cartridge is damaged.	Install the toner cartridge correctly or replace it with a new one.
Toner Low	Any toner cartridge is running low on toner.	Please prepare a corresponding new toner cartridge.
Cartridge Err	The printer does not support the toner cartridge.	Please replace the toner cartridge supported by the printer.
Toner life end	Toner has been used up.	Replace the toner cartridge.
Feed Failure	Paper is not installed correctly. Paper is beyond the specification.	Please install the paper correctly.
Paper settings mismatched	Paper size or paper type at drive end mismatches setting on printer's control panel.	Please change paper size or paper type at printer end.
Paper jam in printer	Paper is not installed correctly.	Please install the paper correctly.
Waste toner bottle is	Waste toner bottle works	Please prepare a new waste toner

nearly full	under capacity.	bottle.
The waste toner bottle is full.	Waste toner bottle is full.	Please replace the waste toner bottle.
No waste toner bottle is detected.	The waste toner bottle is not installed correctly.	Please remove and reinstall the waste toner bottle.
Scanner is Busy	With other scan jobs.	Please cancel the current scan job or wait for the completion of other scan jobs.
Scan failed	Scanner internal failure.	Please contact Pantum Customer Service.
No paper in ADF	If you have selected ADF as the scan source, this message appears when you start a copy or scan job without loading paper in the ADF.	Please put in the original properly.
Paper jam occurred on ADF	This prompt appears when there is a feed jam or feed failure in copying or scanning with the ADF.	Please remove the paper jam, arrange well and put originals into the ADF for scanning again.

Note: • If the problem persists, please contact the customer service center. See the Three Guarantees certificate for contact details.

Common Troubleshooting


Common Problems

Type of fault	Problem	Cause	Solution
Printing problems	Poor print quality	See details in Image Defects .	See details in Image Defects .
Problems in copying	Failed to copy	• The scanner is damaged.	Please contact the customer service center.
	Copy Image Abnormal	• The scanner is dirty or defective. • The toner cartridge is dirty or damaged.	• Clean the scanner. • It is suggested to replace the original toner cartridge.
Problems with the Printer	The printer does not work	• Device power is not properly connected. • The cable between the computer and the printer is not connected properly. • Error in specifying the print port. • The printer is offline and User Guide of Printer is checked. • The printer has not recovered from an internal error, such as a paper jam, paper empty, etc. • Driver program of printer is not installed correctly.	• Ensure proper connection of the power cord. • Disconnect and then reconnect the printer cable. • Check the Windows printer settings to ensure that the print job has been sent to the correct port. If the computer has more than one port, make sure that the printer is connected to the correct port. • Make sure that the printer is in the normal online status. • Please eliminate errors so that the printer can recover to its normal state. • Unload and reinstall the driver program of printer.
Problems in scanning	Scanning error	• Data cable of the device is not properly connected. • The scan driver is installed incorrectly. • The LCD screen prompts error messages.	• Ensure proper connection of the data cable. • Reinstall the scan driver.

Problems with Paper Handling	Paper feed failure	• The print media has been loaded incorrectly. • The print media is out of the supported media range. • The feed roller is dirty. • Too many papers in paper tray.	• Please install the printing medium correctly. If a special printing medium is used, enable the multipurpose feed tray mode. • Please use the print media within the specification range. • Clean the feed roller. • Take the excessive papers out from tray. For printing on a special medium, use the multipurpose feed tray.
	Paper Jam	• Too many papers in paper tray. • The print media is out of the supported media range. • There is foreign matter in the paper path. • The feed roller is dirty. • Internal parts failure.	• Take the excessive papers out from tray. For printing on a special medium, use the multipurpose feed tray. • Make sure to use the paper that meets specifications. For printing on a special medium, use the multipurpose feed tray. • Clean the paper path. • Clean the feed roller.
	Print multipage feed	• Excessive static electricity on the print media. • The print media is damp and is sticking together. • Internal parts failure.	• Separate the print media to eliminate some static electricity. It is suggested that you use the recommended print media. • Separate the print media or use better quality and dry print media.

Note: • If the problem persists, please contact the customer service center. See the Three Guarantees certificate for contact details.

Image Defects

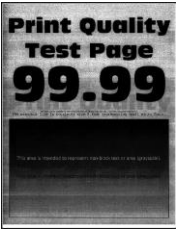Problem	Cause	Solution
 Blank or white pages	• Toner cartridge is not installed properly.	• Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
 Dark print	• A higher density is set when printing. • The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough. • The paper used has been stored in the air for a prolonged time.	• Depending on your operating system, adjust the toner density from "Printing Preferences" or "Print" dialog according to your operating system; or adjust the print density on the printer control panel. • Please properly use the print media within the specification range. • Keep the paper in its original wrapper before use. • Make the "Full Calibration" settings.
 Ghost images	• The tray fails to load the media properly. • Toner cartridge is not installed properly.	• Please load the paper correctly. See Loading Paper for how to feed the paper correctly. • Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray. • Make "Position Calibration" or "Full Calibration" settings.
 Gray or colored background	• Toner cartridge is not installed properly. • The feed channel is dirty. • Scanning exposure. • If a gray or colored background appears during copying or scanning, the glass platen may be dirty.	• Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray. • Clean the feed channel. • Please close the cover on the manuscript, and then carry out copying and scanning. • Clean the platen glass.



Incorrect margins

- The tray fails to load the media properly.
- The print margin is set incorrectly.
- Please load the paper correctly. See Loading Paper for how to feed the paper correctly.
- Please set the correct print margin.
- Make "Position Calibration" or "Full Calibration" settings.



Light print

- A lower density is set when printing.
- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- The resolution in the print program is set too low, and the density is set too low.
- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.
- Toner Save set is checked.
- Please properly use the print media within the specification range.
- Depending on your operating system, adjust the toner density from "Printing Preferences" or "Print" dialog according to your operating system; or adjust the print density on the printer control panel.
- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please check whether the Toner Save mode is enabled.
- Make the "Full Calibration" settings.



Missing color

- Toner cartridge is not installed properly.
 - The developing unit of the missing color is not installed properly.
 - Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
 - Please remove the developing unit of the missing color and re-insert it.
-



Mottled print and dots

- The toner cartridge is dirty or leaks toner.
- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.
- The print mode is set incorrectly.
- The feed channel is dirty.
- If toner spots appear when copying and scanning, the platen glass may be dirty.
- The scanner is dirty or damaged.
- Please contact the customer service center.
- Please properly use the print media within the specification range.
- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Readjust the transfer parameters. Please refer to Transfer Parameter Settings for how to adjust them.
- Clean the feed channel.
- Clean the platen glass.



Paper crooked

- The tray fails to load the media properly.
- The paper used has been stored in the air for a prolonged time.
- Please load the paper correctly. See Loading Paper for how to feed the paper correctly.
- Keep the paper in its original wrapper before use.



Print is crooked or skewed

- The tray fails to load the media properly.
- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- The paper used has been stored in the air for a prolonged time.
- The feed channel is dirty.
- Please load the paper correctly. See Loading Paper for how to feed the paper correctly.
- Please properly use the print media within the specification range.
- Keep the paper in its original wrapper before use.
- Clean the feed channel.



Single color or black images

- Toner cartridge is not installed properly.
- If all-black image appear when copying and scanning, maybe it is scanning exposure, and the cover on the manuscript is not properly closed.
- The scanner is damaged.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please close the cover on the manuscript, and then carry out copying and scanning.
- Please contact the customer service center.



Text or image
cut off

- The tray fails to load the media properly.
- Toner cartridge is not installed properly.
- There are foreign objects inside the printer.

- Please load the paper correctly. See Loading Paper for how to feed the paper correctly.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please contact the customer service center.



Toner comes
off easily

- Print media that does not meet the specifications is used. For example, the media weight is not supported by the printer.
- The paper used has been stored in the air for a prolonged time.

- Please use the print media within the specification range.
- Keep the paper in its original wrapper before use.



Uneven print
density

- Toner cartridge is not installed properly.


- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Make the "Full Calibration" settings.



Horizontal dark
lines

- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.

- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.

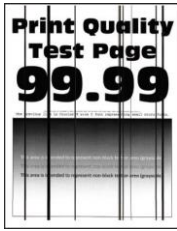

Vertical dark lines

- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.
- The feed channel is dirty.
- If black vertical stripes appear when copying or scanning, the scanner or the platen glass may be dirty.
- Scanner Light bulb has smudges.
- The scanner is damaged.

- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Clean the feed channel.
- Clean the scanner or the platen glass.
- Please contact the customer service center.



Horizontal white lines

- Toner cartridge is not installed properly.

- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.



Vertical white lines

- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- Toner cartridge is not installed properly.

- Please use the print media within the specification range.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.



Repetitive defects

- The toner cartridge is damaged.

- It is recommended to replace with the original toner cartridge.
- Please contact the customer service center.

Note: • The faults above can be mitigated by cleaning or replacing the cartridge. If the problem persists, please contact the customer service center. See the Three Guarantees certificate for contact details.

12 Product Specifications

Note: • Specification values are slightly different for different models of printers with different functions. These values are based on the initial data. For more information about the latest specification, please visit: www.pantum.com.

Overview of the Specifications

Product Size(W*D*H)	415mm*403mm*346mm
Product Weight (No wrappage, with random cartridges)	16.8 kg
Print Environment	Optimal Printing Temp Range:10-32°C Print humidity range: 20%RH~80%RH
Power Voltage	110V Model:AC110-127V,50Hz/60Hz,8A 220V Model:AC220-240V,50Hz/60Hz,4A
Noise(SPL)	Ready:≤30dB(A) Print/scan:≤54dB(A) Copy: ≤56Db(A) Mute mode:≤50dB(A)
Enter network standby time	1 minutes
Default automatic shutdown time(for EU only)	4 hours
Power Consumption	Network standby:wireless<8.00W ; without wireless<2.00W Off mode: ≤0.50W sleep: ≤2.00W Ready: ≤25.00W TEC: conforming to requirements of Chinese energy efficiency rating

Operating system	Microsoft Windows 10/ Windows 11/Windows Server 2016/2019/2022/2025(64Bit)
	macOS 10.13-10.15/ 11-26
	Linux Ubuntu 18.04/Ubuntu 20.04/Ubuntu 22.04/ Ubuntu 24.04 / Astra Linux Special Edition V1.6/Astra Linux Special Edition V1.7/Redhat 8.0/ Debian 11/Debian 12/Centos 8 (64 Bit)
	iOS 11.0-16.5
	Android 6.0-13.0
	HarmonyOS 2.0-3.0
Communication interface	USB 2.0(High Speed)
	IEEE802.3 10 /100/1000Base-Tx
	IEEE802.11 a/b/g/n
	Bluetooth:BLE
Frequency Band	Wi-Fi 5GHz : 5150MHz - 5350MHz; 5470MHz - 5725MHz
	Wi-Fi 5.8GHz : 5725MHz-5850MHz
	BLE: 2400MHz – 2483.5MHz
	Wi-Fi 2.4GHz : 2400MHz – 2483.5MHz
Note:The above frequency bands are common frequency bands, and different markets will restrict the use of certain frequency bands according to the country's regulatory requirements.	
Maximum output power (Declaration for EU Compliance)	BLE: ≤10.00dBm EIRP
	Wi-Fi 2.4GHz : ≤20.00dBm EIRP
	Wi-Fi 5GHz : ≤20.00dBm EIRP
	Wi-Fi 5.8GHz: ≤25mW EIRP

Print Specifications

Print Speed	25ppm(A4)/26ppm(Letter)
Print Time of First Page	Black & White: ≤10s
	Color: ≤12s
Print Language	PCL6,PS3,PDF

Copy Specifications

Copy Speed	25cpm
FCOT	Flatbed <17 s
	ADF<18 s
Maximum number of continuous copies/pages	99 pages
Zoom ratio	25%~400%
Other Copy Functions	ID Printing, Document Printing, N-in-1 Printing, Clone Printing, Collated Printing

Scan Specifications

Scan Type	Flatbed +ADF
ADF scanning speed	26ppm
Scanning time for first page	Flatbed <10 s
	ADF<12 s
Maximum Scan Size	Flatbed:216×297mm ADF:216 x 356 mm
Scan Mode	Color/Grey/Black & White
Scan Output Function	Scan to PC, E-mail, SMB, FTP and USB

PANTUM